



2510

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
0	1634	2766A 5	GEAR HOUSING-COMLETE	1		
1	1634	2766A 1	GEAR HOUSING (BASIC)	1		
2	16	36196	STUD-Gear Housing to Water &	3		
3	16	56298	STUD-Gear Housing to Drive S	2		
4	31	32898	ROLLER BEARING-Drive Shaft	1		
5	45	45695A 2	DRIVE SHAFT ASSEMBLY	1		
6	12	45698	WASHER-Drive Shaft	1		
7	24	20254	SPRING-Drive Shaft	1		
8	17	30545	PIN-Drive Shaft	1		
9	43	55425	PINION GEAR	1		
10	11	30932	NUT-Pinion Gear to Drive Shaft	1		
11	10	28634	SCREW-Gear Housing Grease Fil	1		
12	12	20260	WASHER-Rubber-Grease Filler &	1		
13		45686	SHIFT SHAFT-Lower	1		
14	18	20233	COTTER PIN-Shift Shaft	1		
15	25	25439	O RING-Shift Shaft Bushing	1		
16	23	46284A 1	BUSHING ASSEMBY-Shift Shaft	1		
17	26	46021	OIL SEAL-Shift Shaft Bushing	2		
18	12	31266	WASHER-Shift Shaft Bushing	1		
19	12	29395	WASHER-Shift Shaft	1		
20	15	45691A 1	SHIM SET-Drive Shaft Bearing C	AR		
21	31	45692A 1	TAPERED ROLLER BEARING A	1		
22		NSS	CUP	1		
23	11	45690	NUT-Roller Bearing to Drive Shaf	1		
24	25	26855	O RING-Water and Oil Adaptor (L	1		
25	27	45689	GASKET-Water and Oil Adaptor	1		
26		45685A 1	ADAPTOR ASSEMBLY-Water ar	1		
27	26	38970	SEAL-Rubber-Water Inlet Tube	1		
28	23	52928	SLEEVE-Guide-Water Inlet Tub	1		
29	25	23145	O RING-Water and Oil Adaptor	1		
30	11	30506	NUT-Water & Oil Adaptor to Gear	3		