



2513

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		55647A 1	GIMBAL HOUSING ASSEMBLY	1		
2	22	31345	FITTING, Grease - Gimbal Housir	1		
3		29359	LUBRICAP, Gimbal Housing Grez	1		
4		55880	COVER, Exhaust - Gimbal Housin	1		
5	27	55881	GASKET, Exhaust Cover to Gimb	1		
6	10	32228	SCREW, Exhaust Cover to Gimbe	8		
7	19	38860	WELCH PLUG, Gimbal Housing f	1		
8	23	38634	BUSHING, Synthane - Gimbal Ho	1		
9	26	32540	OIL SEAL, Upper Gimbal Housing	1		
10	23	38196	BUSHING, Synthane - Gimbal Ho	1		
11	26	32911	OIL SEAL, Lower Gimbal Housing	2		
12	30	31561	BALL BEARING- Gimbal Housing	1		
13		38188	MDUNT, Rubber - Gimbal Housin	1		
14	10	35046	DRIVE SCREW- Gimbal Housing	8		
15	54	22875	CLAMP, Water Tube to Gimbal H	2		
16	10	37572	SCREW, Water Tube Clamp to G	2		
17		22789	"D" WASHER, Water Tube Clam	2		
18	27	55877	GASKET, Gimbal Housing to Trar	1		
19		55879	PILOT RING, Gimbal Housing	1		
20	26	55878	SEAL, Water - Gimbal Housing	1		
21		34762A 1	PLATE ASSEMBLY, Inhibitor - Gii	1		
22	10	34763	SCREW, Inhibitor Plate to Gimb	2		
23	12	49199	WASHER, Rubber - Gimbal Hous	2		
24	32	38841	WATER TUBE- Gimbal Housing	1		
25	54	38840	CLAMP, Water Tube to Gimbal H	1		
26	10	38862	SCREW, Water Tube Clamp to G	1		
27	13	26992	LOCKWASHER, Water Tube Cla	1		
28	23	38265	BUSHING, Seal - Water Tube	1		
29		38209	COVER, Water Tube	1		
30	10	34290	SCREW, Water Tube Cover to G	2		
31	32	46716A 1	HOSE-Water-Gimbal Housing to E	1		
NS		56038	EMBLEM-Gimbal Housing	1		
32	54	35830	CLAMP-Water Tube to Gimbal Hou	2		
33		38584	PLATE-Supporting-Transom Screw	1		
34	10	38197	SCREW-Transom to Gimbal Housin	4		
35	13	30381	LOCKWASHER-Transom Screw	4		
36	12	38585	WASHER-Square-Transom Screw	2		
37	10	48565	BOLT-Gimbal Housing to Transom f	4		
38	12	36041	WASHER-Gimbal Housing Bolt	4		
38	12	21900	WASHER-Gimbal Housing Bolt	4		
39	11	24087	NUT-Gimbal Housing Bolt	4		