



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		58577	DISTRIBUTOR ASSEMBLY, COM	1		
2		46630	CAP ASSEMBLY, DISTRIBUTOR	1		
3		46631	BALL AND SPRING ASSEMBL	1		
4		46632	ROTOR, DISTRIBUTOR	1		
5	12	46967	WASHER, FELT - DISTRIBUTOR	1		
6		46969	SHIELD, BREAKER ASSEMBLY	1		
7		46635	BREAKER ASSEMBLY, DISTR	1		
8	18	46633	PIN (HAIR), RETAINING - BREA	1		
9	10	46636	SCREW, BREAKER ASSEMBLY T	1		
10		58584	PLATE, MOUNTING - BREAKER A	1		
11		58583	WIPER KIT, DISTRIBUTOR ROTC	1		
12	24	58580	SPRING, CAM BREAKER ADVANC	1		
13	24	58581	SPRING, CAM BREAKER ADVANC	1		
14		46626	CONDENSER	1		
15	10	46629	SCREW, CONDENSER TO DISTR	1		
16	13	26996	LOCKWASHER, CONDENSER SC	1		
17	13	58582	LOCKWASHER, CONDENSER SC	1		
18		46625	RETAINER KIT, DISTRIBUTOR C	1		
19	10	46622	SCREW, PRIMARY TERMINAL	1		
20		58579	DRIVE KIT, DISTRIBUTOR	1		
21		57017	LEAD ASSEMBLY, COIL TO DISTR	1		
22		38547	COIL ASSEMBLY, IGNITION	1		
23	12	45075	WASHER, SQUARE - COIL TERM	2		
24	13	26996	LOCKWASHER, COIL TERMINAL	2		
25	11	20645	NUT, COIL TERMINAL	2		
26		33321	BRACKET, COIL	1		
27	10	27165	SCREW, COIL BRACKET TO MOL	1		
28	12	20553	WASHER, COIL BRACKET SCREW	1		
29	11	52412	NUT, COIL BRACKET SCREW	1		
30	10	33311	SCREW, COIL ATTACHING BRAC	1		
31		56207	BRACKET, COIL MOUNTING - LIF	1		
32	10	56405	SCREW, MOUNTING BRACKET T	2		
32	10	45628	SCREW, MOUNTING BRACKET T	1		
33	13	26992	LOCKWASHER, MOUNTING BRA	2		
33	13	39107	LOCKWASHER, MOUNTING BRA	1		
34		37036	CLAMP, DISTRIBUTOR TO CYLIN	1		
35	16	37176	STUD, DISTRIBUTOR CLAMP TO	1		
36	12	37175	WASHER, DISTRIBUTOR CLAMP	1		
37	11	37177	NUT, DISTRIBUTOR CLAMP STU	1		
38	27	37058	GASKET, DISTRIBUTOR	1		
39	13	26995	LOCKWASHER, GROUND WIRE	1		