



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		849317A	4 TRANSMISSION ASSEMBLY	1	(Complete)	
1		849317A	3 TRANSMISSION ASSEMBLY	1		
2	22	47629	ELBOW	2	(Transmission To Oil Hose)	
3		47613	SWITCH-Neutral	1		
4	13	32993	LOCKWASHER (.437)	6		
5	10	60179	SCREW (.437-14 x 3.500)	6		
6	12	20722	WASHER	1		
7	13	26993	LOCKWASHER (.312)	1		
8	11	22053	NUT (.312-24)	1		
9	22	88517	FITTING-Reducing	1		
10	87	88031	SWITCH-Oil Temperature	1		
11		847145T	1 SUPPORT AND LEVER KIT-U Joint	1		
12		847175	PLATE ASSEMBLY-Shift Linkage	1		
13	16	846453	STUD (.375-16 x 1.250)	2		
14	11	34059	NUT (#10-32)	5		
15		846344	SPACER-Cable Bracket	1		
16	54	846341	BRACKET-Shift Cable	1		
17	10	34994	SCREW (#10-32 x 1.00)	5		
18	11	68219	NUT (#10-32)	3		
19		846786	END-Rod	3		
20	23	846787	SPACER-Rod End	3		
21	12	841388	WASHER	3		
22	23	812707	BUSHING	1		
23	11	846869	NUT (.375-16)	2		
24		847025	ARM-Shift Cable	1		
25	12	846783	WASHER (Nylon)	1		
26	11	826709113	NUT (.375-24)	1		
27	27	47903	GASKET	1	(Transmission To Support Housing)	
28		847052	LEVER-Transmission Shift	1		
29	16	846964	STUD-Shift Rod	1		
30	16	847030	STUD	6	(.437-14/.437-20 x 3.00)	
30	16	847031	STUD	2	(.437-14/.437-20 x 2.750)	
31	12	842922	WASHER	8		
32	11	826710	15 NUT (.437-20)	8		
33		846693	SEAL-Housing	1		
34		847123A	1 SUPPORT ASSEMBLY-U Joint	1		
34		846961	1 HOUSING-U Joint Support	1		
35	26	846497	SEAL-Inner Coupler	1		
36	31	846477A	1 BEARING SET-Rear Coupler	1	(Cup And Cone)	
37		846960	SHAFT-Coupling	1		
38	11	826709	10 NUT (.312-18)	1		