



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		840600A 4	TRANSMISSION ASSEMBLY	1	(Complete)	1
1		840600A 3	TRANSMISSION ASSEMBLY	1		1
2	22	47629	ELBOW	2	(Transmission To Oil Hose)	
3		47613	SWITCH-Neutral	1		
4	13	32993	LOCKWASHER (.437)	6		
5	10	60179	SCREW (.437-14 x 3.500)	6		
6	12	20722	WASHER	1		
7	13	26993	LOCKWASHER (.312)	1		
8	11	22053	NUT (.312-24)	1		
9	22	88517	FITTING-Reducing	1		
10	87	88031	SWITCH-Oil Temperature	1		
11	22	63186	FITTING (.125-27)	1		
12		847145T 1	SUPPORT AND LEVER KIT-U Jc	1		
13		847175	PLATE ASSEMBLY-Shift Linka	1		
14	16	846453	STUD (#.375-16 x 1.250)	2		
15	11	34059	NUT (#10-32)	5		
16		846344	SPACER-Cable Bracket	1		
17	54	846341	BRACKET-Shift Cable	1		
18	10	34994	SCREW (#10-32 x 1.00)	5		
19	11	68219	NUT (#10-32)	3		
20		846786	END-Rod	3		
21	23	846787	SPACER-Rod End	3		
22	12	841388	WASHER	3		
23	23	812707	BUSHING	1		
24	11	846869	NUT (.375-16)	2		
25		847025	ARM-Shift Cable	1		
26	12	846783	WASHER (Nylon)	1		
27	11	826709113	NUT (.375-24)	1		
28	27	47903	GASKET	1	(Transmission To Support Housing)	
29		847052	LEVER-Transmission Shift	1		
30	16	846964	STUD-Shift Rod	1		
31	16	847030	STUD	6	(.437-14/.437-20 x 3.00)	
31	16	847031	STUD	2	(.437-14/.437-20 x 2.750)	
32	12	842922	WASHER	8		
33	11	826710 15	NUT (.437-20)	8		
34		846693	SEAL-Housing	1		
35		847123A 1	SUPPORT ASSEMBLY-U Joint	1		
35		846961 1	HOUSING-U Joint Support	1		
36	26	846497	SEAL-Inner Coupler	1		
37	31	846477A 1	BEARING SET-Rear Coupler	1	(Cup And Cone)	
38		846960	SHAFT-Coupler	1		