



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	72774A88	PUMP ASSEMBLY-Sea Water	1		
2	10	73275	SCREW (.312-18 x 2.875)	5		
3	12	843108	WASHER	5		
4		93871T	COVER-Sea Water Pump	1		
5	27	805215 1	GASKET	1	(Cover To Cover Wear Plate)	
6		94916	WEAR PLATE -Outer	1		
7	27	94914	GASKET	1	(Body To Wear Plate)	
8	19	59504	PLUG-Impeller	2		
9	47	59362T 1	IMPELLER	1		
10	46	72774 1	BODY-Sea Water Pump	1		
11		94576	WEAR PLATE-Inner	1		
12	25	94288	QUAD RING-Pump Housing	1		
13	46	94913A 1	HOUSING ASSEMBLY-Sea Water	1		
14	26	90562	SEAL-Oil	2		
15	30	72961 1	BEARING-Ball	2		
16		59501A 1	SHAFT-Sea Water Pump	1		
17	53	23720	RING-Retaining	1		
18	26	72785	SEAL-Oil	1		
19		47530	HUB-Pulley	1		
20	22	806604 2	FITTING (Straight)	1		
21	22	61168	ELBOW (Brass - 90 Degree)	1		
22	22	847720 17	FITTING (Straight)	1		
23	22	47945	PLUG-Pipe (.125-27)	2		
24	10	34354	SCREW (.375-16 x 1.50)	1		
25	12	856774	WASHER	1		
26	12	29330	WASHER	1		
27		47489 1	BRACKET-Sea Water Pump	1		
28	10	849198	SCREW (.312-24 x .750)	4		
29		818761 1	PULLEY-Sea Water Pump	1	(Blue)	
30	57	94290	V BELT-Sea Water Pump	1		
31	11	826710 15	NUT (.437-20)	2		
32	12	45176	WASHER	2		
33	16	57982	STUD (.437-14/.437-20 x 1.875)	2		
34	10	35047	SCREW (.375-16 x 1.250)	1		
35	12	856774	WASHER	2		
36		842440	BRACE	1	(Sea Water Pump To Alternator)	1
37	11	826709 12	NUT (.375-16)	1		