



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		818728	SUPERCHARGER ASSEMBLY	1		
2	10	849031 4	SCREW (Special)	10	(Rear)	
3	10	849031 8	SCREW (Special)	10	(Front)	
4	22	67892A 1	PLUG KIT-Drain	2	(Magnetic)	
5	12	19183 2	SEAL	2		
6		849528	SIGHT GLASS ASSEMBLY-Oil	1		
7		818715A 1	SNOUT ASSEMBLY	1		
8	10	90073	SCREW (.312-18 x 1.00)	6		
9	27	847601	GASKET-Snout	1		
10	30	20839T	BEARING-Ball	2		
11	53	55626	RING-Snap	2		
12	53	68486	RING-Snap	1		
13		818799	HUB-Driveshaft	1		
14	26	818801	SEAL	1		
15		818798	DRIVESHAFT	1		
16	10	90073	SCREW (.312-18 x 1.00)	6		
17		818721	SPACER-Pulley	1		
18		818717 48	PULLEY-Supercharger Belt	1		
19	12	856774	WASHER	6		
20	10	849032	SCREW (.380-24 x 2.00)	6		