



NOTE: FOR CONTINUITY CIRCUIT COMPONENTS, SEE THE "CONTINUITY KIT" SECTION.

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1547	815930A	DRIVE SHAFT HOUSING ASSEM	1		
2	10	79953A	SCREW KIT-DRAIN	1		
3	12	19183	WASHER	1		4
4	24	17997A	SPRING KIT	1		
5	26	66302	SEAL-OIL	2	(Serial No. 0M400411 and Below)	
5	26	864319	SEAL-OIL	1	(Serial No. 0M400412 and Up)	4
6		821564	PLUG	1		
7		814386	WEAR PAD	1	(PORT)	
7		814387	WEAR PAD	1	(STARBOARD)	
8	19	32297	PLUG	1		
9		814819A	UNIVERSAL JOINT	1		
10		46020T	YOKE-GEAR END	1		
11		39383T	SOCKET-CENTER	1		
12		805536A	CROSS AND BEARING	2		
13		814819A	YOKE-COUPLER END	1		
14	25	29845	O-RING	2	(.924 I.D.)	4
14	25	35027	O-RING	1	(1.046 I.D.)	4
15		816811	RETAINER	1		
16		35983	RING	1		
17	25	70937	O-RING	1		4
18		66081A	CARRIER ASSEMBLY	1		
19	26	823894	SEAL-OIL	1		4
20	31	35988A	BEARING KIT-ROLLER	1		
21	23	35985	SPACER-CUP	1		
22	15	35980A	SHIM	AR		3
23	15	71013	SHIM	1		
24	43	55778A	GEAR KIT	1	(2.40:1 AND 1.94:1 RATIO) (20-24 GEARS)	
24	43	75325A	GEAR KIT	1	(1.81:1 RATIO) (17-19 GEARS)	
24	43	45814A	GEAR KIT	1	(1.62:1 RATIO) (24-24 GEARS)	
24	43	18411A	GEAR KIT	1	(1.47:1 RATIO) (20-22 GEARS)	
25	31	35990A	BEARING ASSEMBLY-ROLLER	1		
25	31	32573A	BEARING ASSEMBLY-ROLLER	1	(1.47:1 RATIO ONLY)	
26	12	45810	WASHER	1		
27	11	22339	NUT (5/8-18)	1		
28	15	36178A	SHIM ASSEMBLY	AR		3
-	26	88397A	DRIVESHAFT HOUSING SEAL KIT	-		