



23046

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	87	815425T	SENDER ASSEMBLY, Oil Pressure	1		
2		881879011	SENSOR, Pressure (0 - 100 PSI), 0	1		
3		805218T	SENSOR, Coolant	1		
4		806490T	SENDER, Coolant Temperature	1		
5		865155T05	MODULE ASSEMBLY, ECM	1	(350 MPI)	
5		865156T06	MODULE ASSEMBLY, ECM	1	(6.2L MPI)	
6	10	821300 25	SCREW, (M6 x 25)	3		
7	12	65567	WASHER, (.265 x .750 x .048)	3		
8	25	834985	GROMMET	3		
9	23	856954	BUSHING	3		
10	13	26992	LOCKWASHER, (.250)	2		
11	10	860008	SCREW, Torx (.250-20 x .625)	2		
12	84	865245T03	WIRING HARNESS	1		
13	54	865205	CLIP, Relay Mounting	2		
14	54	879962	CLIP, Fuse Block Mounting	1		
15		858754	COVER, Fuse, Fuse	1		
16		865202T	RELAY	3		
17	88	832969 15	FUSE, Blue - 15 Ampere	2		
17	88	832969 20	FUSE, Yellow - 20 Ampere	3		
18		865220T	BRACKET, Relay Mounting	1		
19	88	865827T	CIRCUIT BREAKER, 50 Ampere	1		
20	11	826709106	NUT, (#10-32)	2		
21	10	830861	SCREW, (8-32 x .625)	2		
22	85	89919	BOOT, Insulator (Black)	2		
23		859318T 1	TERMINATOR, 10 Pin (CAN 1 and	1		
24	84	865769T01	HARNESS	1		
25	22	864669	FITTING	1		
26		878187	SENSOR ASSEMBLY, Knock	11		
27	10	98261	SCREW, (.375-16 x .750)	3		
28		816492A 6	ALARM KIT	1		
29		899719T03	BRACKET	1		