



12070

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1589	865440H50	DRIVESHAFT HOUSING, Comple	1	(Bravo-I 1.36:1 Ratio)(Bravo-II 1.50:1 Ratio)	
-	1589	865440H51	DRIVESHAFT HOUSING, Comple	1	(Bravo-I 1.50:1 Ratio)(Bravo-II 1.65:1 Ratio)	
-	1589	865440H52	DRIVESHAFT HOUSING, Comple	1	(Bravo-I 1.65:1 Ratio)(Bravo-II 2.20:1 Ratio)	
-	1589	865440H01	DRIVESHAFT HOUSING, Comple	1	(Bravo-II 1.81:1 Ratio)(Bravo-III 1.81:1 Ratio)	
-	1589	865440H02	DRIVESHAFT HOUSING, Comple	1	(Bravo-III 1.50:1 Ratio)	
-	1589	865440H72	DRIVESHAFT HOUSING, Basic	1		
1		865441A02	COVER ASSEMBLY, Back	1		
2		12708	SEAL	1		17
3		14497A 2	DETENT ASSEMBLY	1		
4	10	98794	SCREW, (.375-16 x 1.00)	2		
5	10	87158	SCREW, (.375-16 x 1.875)	1		
6		805261A 1	WEAR PAD KIT	1		
7		12711	SHAFT	1		
8		806552A 1	YOKE AND CAM ASSEMBLY	1		
9		806552	YOKE	1		
10	10	805733	SCREW, (.250-28 x 1.00)	2		
11	23	12706	SPACER	2		
12	11	826713 9	NUT, (.250-28)	2		
13	10	865712	SCREW, (.250-28 x .930)	2		
14		861175A 2	SHIFT LINKAGE ASSEMBLY, Hi	1	Used With Drive Housings 865440H50-52	
14		861175A03	SHIFT LINKAGE ASSEMBLY, Lo	1	(Used With Drive Housings 865440H01-02)	
15		NSS	NOT SOLD SEPARATE, SHIFT	1		
16	12	20583	WASHER	1		
17	18	26953	COTTER PIN	1		
18		86776	LATCH	1		
19		864244A 2	UNIVERSAL JOINT ASSEMBLY	1		
20		865494A01	YOKE ASSEMBLY, Coupler En	1		
21	25	29845	O-RING, (.924 x .103)	2		17
22	25	35027	O-RING, (1.046)	1		17
23		865509T	SOCKET, Center	1		
24		865496A01	CROSS AND BEARING	2		
25		865495T	YOKE, Gear End	1		
26	11	92004	RING NUT	1		
27		86779A 1	CARRIER ASSEMBLY	1		
28	26	807006	SEAL, Oil	1		
29	12	41613	WASHER	1		
30	25	861844	O-RING	1		
31		86780	RING	1		
32	31	86763A04	BEARING ASSEMBLY, Tapered Ri	1		
33	43	883473A 2	GEAR SET, (32/27)	1		
33	42	882476A 2	GEAR SET, (29/27)	1		