



5476

NOTE: FOR CONTINUITY CIRCUIT COMPONENTS, SEE "CONTINUITY KIT"

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		41646A 9	BELL HOUSING ASSEMBLY	1		
1		866457A01	BELL HOUSING ASSEMBLY	1		
2	12	806241	WASHER	2		
3	16	59579	STUD, (.437-14/.437-20 x 2.812)	6		
4		41674	INSERT	1		
5	25	62705	O-RING	1		
6	12	35935	WASHER	6		
7	11	859116	NUT, (.437-20)	6		
8		86840A 3	BELLOWS ASSEMBLY, Universal	1		
9	54	86049	CLIP, Grounding	1		
10	54	815504372	CLAMP, Worm Gear	1		
11		862209	SLEEVE	1		
12		18654A 1	BELLOWS, Exhaust	1		
13	54	86049	CLIP, Grounding	2		
14	54	815504348	CLAMP, Worm Gear	2		
15		815303	ADAPTOR	1		
16		18920A 1	VALVE ASSEMBLY	1	(Use With Oil Reservoir)	
17	25	48171	O-RING, (.364. x .070)	2	(Use With Oil Reservoir)	
18	54	12994	CLIP	1		
19	54	818557	CLAMP	2		
20		865391	FITTING ASSEMBLY, Speedomete	1		
21	22	865417	FITTING, Female Quick Connect	1		