



NOTE: FOR CONTINUITY CIRCUIT COMPONENTS, SEE "CONTINUITY KIT"

18720

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		41646A 9	BELL HOUSING ASSEMBLY	1	(USE WITH TRIM SENDERS)	
1		41646A10	BELL HOUSING ASSEMBLY	1	(USE WITHOUT TRIM SENDERS)	
2	12	806241	WASHER	2	(USE WITH TRIM SENDERS)	
3	16	59579	STUD, (.437-14/.437-20 x 2.812)	6		
4		41674	INSERT	1		
5	25	62705	O-RING	1		
6	23	847637	BUSHING	2	(USE WITHOUT TRIM SENDERS)	
7	12	35935	WASHER	6		
8	11	13439 1	NUT, (.4375-20)	6		
9		86840A 3	BELLOW'S ASSEMBLY	1		
10	54	86049	CLIP, Grounding	1		
11	54	815504372	CLAMP, Worm Gear	1		
12		86814	SLEEVE	1		
13		18654A 1	BELLOW'S	1		
13		78458A 1	TUBE	1		
14	54	86049	CLIP, Grounding	2		
15	54	815504348	CLAMP, Worm Gear	2		
16		815303	ADAPTOR	1		
17	32	54950 25	TUBING, (25.00 Feet Bulk)	1		
18	54	12994	CLIP	1		
19	54	816606	CLAMP	1		
20	22	816594A 1	FITTING ASSEMBLY	1		
21	22	56800	PLUG, Pipe (.0625-27)	1		
22	22	814382	CONNECTOR	1		
23	54	818557	CLAMP	2		
24		18920A 1	VALVE ASSEMBLY	1	(USE WITH OIL RESERVOIR)	
25	25	48171	O-RING, (.364. x .070)	2	(USE WITH OIL RESERVOIR)	