



NOTE: FOR CONTINUITY CIRCUIT COMPONENTS, SEE "CONTINUITY KIT"

18719

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		822374A 4	GIMBAL RING ASSEMBLY	1	(FOR USE WITH TRIM SENDER:	
2	23	847638	BUSHING, Use With Magnum Gi	1	(FOR USE WITH TRIM SENDER:	
2	23	99352	BEARING, Use With Standard Gi	1	(FOR USE WITH TRIM SENDER:	
3	23	847637	BUSHING	2	(FOR USE WITH TRIM SENDER:	
4	12	41721	WASHER	2	(FOR USE WITH TRIM SENDER:	
5	10	86801	SCREW, Hinge Pin	2	(FOR USE WITH TRIM SENDER:	
6		805320A 1	SWITCH ASSEMBLY	1	(FOR USE WITH TRIM SENDER:	
NS		805134A 4	ROTOR KIT	AR	(FOR USE WITH TRIM SENDER:	5,6
7	10	37978	SCREW, (#10-32 x .750)	4	(FOR USE WITH TRIM SENDER:	
8	13	26996	LOCKWASHER, (#10)	4	(FOR USE WITH TRIM SENDER:	
9		57008	RETAINER	4	(FOR USE WITH TRIM SENDER:	
1		822374A 3	GIMBAL RING ASSEMBLY	1	(HI PERFORMANCE) (FOR USE \	
2	23	847638	BUSHING	1	(FOR USE WITHOUT TRIM SENI	
4	12	41721	WASHER	2	(FOR USE WITHOUT TRIM SENI	
10		821997	HINGE PIN	2	(FOR USE WITHOUT TRIM SENI	
11	10	821579	SCREW, (#10-24 x .500)	4	(FOR USE WITHOUT TRIM SENI	
12		98230A 1	SHAFT ASSEMBLY, Upper	1		
13	12	98548	WASHER, (1.125)	1		
14		98262A 1	LEVER ASSEMBLY	1		
15	12	85344	WASHER, (.750 Inside Diameter)	1		
16	11	25599	NUT, (.750-16)	1		
17	10	807204	SCREW, (.437-20 x 2.00)	1		
18	12	91964	WASHER	1		
19	11	98533	NUT, (.437-20)	1		
20		79146	RETAINER	1		
21	54	12078	CLAMP	1		
22	10	28635	SCREW, (.250-20 x .620)	1		
23		816510T	BRACKET	1		
24	10	805164	U BOLT	1		
25	11	13437 1	NUT, (.375-24)	2		
26	54	818557	CLAMP	1		
-		805130A 6	SENDER KIT, Dual Station	1		