



1872A

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	32	861127	HOSE, Black, Connector to Pump	1		
2	32	861128	HOSE, Gray, Connector to Pump	1		
3	32	99904	HOSE, Trim Cylinder to Connector	2		
4		98704A17	TRIM CYLINDER, Starboard	1	(SEE POWER TRIM CYLINDER F	
5		98703A17	TRIM CYLINDER, Port	1	(SEE POWER TRIM CYLINDER F	
-		87399A 2	OVERHAUL KIT	2		
-	25	87400A 2	SEAL KIT	2		
6		806190A 1	ANODE ASSEMBLY	2		
7	10	806290	SCREW, (#10-32 x .625)	4		
8	13	69432	LOCKWASHER, (#10 External)	4		
9	32	99902	HOSE, Trim Cylinder, Starboard	1		
10	32	99903	HOSE, Trim Cylinder, Port	1		
11		85060	PLATE	2		
12	10	85486	SCREW, (.250-20 x .375)	4		
13	17	44167A 1	PIN, Front	1		
14	53	805272	RING, Retaining	2		
15	12	44164	WASHER	2		
16	23	807073	BUSHING	4		
17	12	44163	WASHER	2		
18	11	13439 1	NUT, (.4375-20)	2		
19	19	14842	CAP	2		
20	17	44166	PIN, Rear	1		
21	12	44164	WASHER	2		
22	23	807073	BUSHING	4		
23	12	44163	WASHER	2		
24	11	13439 1	NUT, (.4375-20)	2		
25	19	14842	CAP	2		
26	22	808727	CONNECTOR, (.437 UNF To .25 Ir	2		
27		806692A 2	TRIM, Down	1	(LIMIT BLOCKS-TRIM CYLINDER	
28		15768A 3	SPACER KIT, Up	1	(SPACER KIT-TRIM CYLINDER)	