



8562

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		854074	VALVE, Exhaust	4		
2		854074001	SEAT, Exhaust Valve	4		
3	19	889855	PLUG, Expansion	8		
4	25	809963342	O-RING	4		
5	10	801763377	PLUG	4		
6	16	801333875	STUD	8		
7	16	854069	STUD, (M8 x 60)	4		
8		854058T	BRACKET, Rocker Arm	4		
9		854057001	ROCKER ARM ASSEMBLY	4		
10	11	896332019	NUT, Rocker Arm	8		
11		801331755	KEEPER	16		
12		801331754	CAP, Spring	8		
13	24	811388	SPRING	8		
14		801331752	PLATE, Valve Spring	8		
15	26	854068	SEAL, Valve	8		
16		854070	VALVE GUIDE, Standard	8		
17		889509	CYLINDER HEAD ASSEMBLY	4		
18	27	879675	GASKET, (1.41mm), Cylinder Head	1		
18	27	879676	GASKET, (1.51mm), Cylinder Head	1		
18	27	879677	GASKET, (1.61mm), Cylinder Head	1		
19	22	896332018	ADAPTOR, Water Temp Sensor	1		
20	12	811438	WASHER, Sealing	1		
21	87	854081	SENSOR, Engine Coolant Temperz	1		
22		854071001	SEAT, Intake Valve	4		
23		854073001	VALVE, Intake	4		