



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		830401262	ALTERNATOR ASSEMBLY	1		
1		834311380	PULLEY-Drive	1		
2		834411170	FAN-Alternator	1		
3		831016080	NUT-Pulley	1		
4		839016480	LOCKWASHER	1		
5		834121140	COLLAR-Spacer	1		
6		833101510	FRAME ASSEMBLY-End	1		
7		833101510	FRAME-End	1		
8		833121520	PLATE-Retainer	8		
9		833621090	BOLT-Through	3		
10	30	838120122	BEARING-Ball	1		
11		834121150	COLLAR-Spacer	1		
12		833171440	BOLT-Through	3		
13		834101600	STATOR ASSEMBLY	1		
14		833301530	ROTOR ASSEMBLY	1		
15		833331030	RING-Spacer	1		
16		838112102	BEARING-Rotor	1		
17		833591810	FRAME-Rectifier	1		
18		833561220	HOLDER & RECTIFIER	1		
19		833711170	BRUSH	2		
20		833761030	HOLDER-Brush	2		
21		833871150	INSULATOR-Terminal	1		
22	11	830106050	NUT-Terminal	2		
23		830105040	NUT	4		
24		833871160	INSULATOR-Terminal	2		
25		833871170	INSULATOR-Terminal	1		
26		833551180	CONDENSER	1		
27		833511020	BUSHING-Frame	1		
28		837001520	REGULATOR ASSEMBLY	1		
29		834451190	CLAMP	1		
30		833781600	INSULATOR-Terminal	1		
31		833651080	WIRE-Lead	1		
32		833641450	BOLT-Terminal	1		