



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		834551130	PLATE-Mounting	2		
2		835112400	BRACKET-Alternator	1		
3		835122051	BRACE-Alternator	1		
4		830231190	PIPE-Coolant	1		
5		831811170	VALVE-Coolant	1		
6	33	831101160	GLOW PLUG	6		
7		831121151	WIRE-Glow Plug Ground	5		
8		830401262	ALTERNATOR ASSEMBLY	1	SEE ALTERNATOR ASSEMBLY	
9		831001961	STARTER ASSEMBLY	1	SEE STARTER ASSEMBLY	
10		834101220	RELAY-Starter	1		
11		836201250	RELAY-Glow Plug	1		
12		830642530	WIRE	1		
13		830149235	BELT SET-Alternator	1		
14		830803108	STRAP-Ground	1		
15	10	834999991	BOLT-Alternator Adjust	1		
16		831114450	BOLT-Starter	1		
17		831164401	BOLT-Alternator Pivot	1		
18		839106302	BOLT-Relay	2		
19	11	830106050	NUT-Relay	2		
20		830110080	NUT-Alternator	1		
21	11	830114110	NUT-Starter	2		
22	11	830910141	NUT-Terminal	1		
23		836006140	WASHER-Flat	2		
24	12	836010330	WASHER-Flat	2		
25		836014300	WASHER-Flat	2		
26	12	836014270	WASHER-Flat	2		
27		838010250	LOCKWASHER	2		
28	13	838014350	LOCKWASHER	3		
29	10	830110250	BOLT-Brace	1		
30	10	830110300	BOLT-Bracket	4		
31		831110901	BOLT-Bracket	2		
32	25	835113103	WASHER-Sealing	1		
33		832715200	CONNECTOR-Cooling Line	1		
34	25	835144112	O-RING	2		
35		F729456	HARNESS-Engine Wiring-STBD	1		
35		F729455	HARNESS-Engine Wiring-PORT	1		