



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		831002240	TURBOCHARGER ASSEMBLY	1		
1		831501310	ROTOR ASSEMBLY	1		
2		831151330	ROTOR-Turbine	1		
3		831161040	THR0WER-Oil	1		
4		831421070	SPACER-Thrust	1		
5		831241190	SEAL-Ring	1		
6		831241180	SEAL-Ring	1		
7		831241170	SEAL-Ring	1		
8		831171140	NUT-Lock	1		
9		831181111	IMPELLER-Blower	1		
10		831271130	PLATE-Backing	1		
11		831311110	BEARING	2		
12		831431060	BEARING-Inboard Thrust	1		
13		831141140	CASE-Blower	1		
14		831451280	BOLT-Housing	6		
15		831231260	PLATE-Retainer	6		
16		831111430	CASE-Turbine	1		
17		831451190	BOLT	6		
18		831231270	PLATE	6		
19		831211250	CASE-Bearing	1		
20		831321080	RING-Nozzle	3		
21		831361120	SCREW	4		
22		831361170	SCREW	4		
23		831411150	PROTECTOR-Heat	1		