



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	91	883848	INSTALLER-Crankshaft Oil Seal (Cra	1		
2	91	883847	INSTALLER-Crankshaft Oil Seal (Cra	1		
3	91	883844	PULLER-Injection Pump Drive Pulle	1		
4	91	883846	INSTALLER-Valve Guide	1		
5	91	35547	WRENCH-Engine Coupler	1		
6	91	883845	ADAPTOR-Valve Spring Compress	1		
7	91	883855	INSTALLER-Camshaft Oil Seal	1		
8	91	883856	REMOVER-Injection Nozzle Sleeve	1		
9	91	883857	INSTALLER-Injection Nozzle Sleev	1		
10	91	883858	INSTALLER-Injection Nozzle Seal	1		
11	91	883859	ALIGNER-Cylinder Block / Oil Pan	1		
12	91	883860	INSTALLER-Oil Jet Pipe	1		
13	91	883849	INSTALLER-Oil Pump Seal	1		
14	91	883850A.1	COMPRESSOR SET-Valve	1		
15	91	883851	WRENCH-Oil Filter	1		
16	91	883852	ADAPTOR-Compression Guage	1		
17	91	883853	LOCKING TOOL-Cam Shaft	1		
18	91	883854	INSTALLER-Valve Stem Seal	1		
19	91	24697	PLIERS-Piston Ring	1		
20			PULLER	1		
21	91	883861	LOCKING TOOL-Flywheel	1		

