



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		814874	SEAWATER PUMP ASSEMBLY	1,1		
02	10	801332604	SCREW	1,1		
3	17	801332620	PIN	1,1		
4	30	801332597	BALL BEARING	2,2		
5	23	801332596	SPACER	1,1		
6	53	801332595	SNAP RING	1,1		
7	45	801332593	SHAFT	1,1		
8	12	801332601	THRUST WASHER	1,1		
9	26	801332600	OIL SEAL	2,2		
10		801332599	SPREADER	1,1		
11	25	801332598	O-RING	1,1		
12		814873	CAM	1,1		
13	47	801332602	IMPELLER	1,1		
14	27	801332606	GASKET	1,1		
15		801332607	COVER	1,1		
16	10	801332608	SCREW	6,6		
17	25	801333850	O-RING	1,1		
18	11	809922800	NUT	4,4		
19	32	805375	SEAWATER HOSE	1,1		
21	32	805376	SEAWATER HOSE	1,1		
23	54	801326639	CLAMP	10,10		
24	54	801761122	CLAMP	2,2		
25	10	809915039	SCREW	1,1		
27	12	809931067	WASHER	2,2		
28	54	801331113	CLAMP	2,2		
29	10	809913624	SCREW	2,2		
30	11	40021	NUT	3		
31		801761589	SUPPORT ANGLE	2,2		
32	10	809913483	SCREW	2,2		
33	23	801763599	SPACER	2,2		
34		801763335	DRAIN COCK	1,1		
35	32	801763997	HOSE	1,1		
36		801761588	PLATE	1,1		
37	10	809913815	SCREW	1,1		
38	32	801761585	SEAWATER PIPE	1,		
39	32	801761584	HOSE	1,1		
40		801763719	SEAWATER PIPE	1,		
40	32	801761586	SEAWATER PIPE	1,		
41	32	801763230	HOSE	1,1		
42		801763722	SEAWATER PIPE	1,		
42	32	801763229	SEAWATER PIPE	1,		