



A = TO AIR COOLER
 B = TO SEA WATER FILTER

| Parts List | | | | | | |
|------------|-------|-----------|------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 46 | 816248 | PUMP ASSEMBLY-SEAWATER | 1 | | |
| 2 | 10 | 801332608 | SCREW | 6 | | |
| 3 | | 801332607 | COVER | 1 | | |
| 4 | 27 | 801332606 | GASKET | 1 | | |
| 5 | 47 | 816814T | IMPELLER | 1 | | |
| 6 | | 816813 | CAM | 1 | | |
| 7 | 12 | 801332601 | WEAR PLATE | 1 | | |
| 8 | 53 | 816815 | RING-RETAINING | 1 | | |
| 9 | 23 | 816816 | SPACER | 1 | | |
| 10 | | 816817 | SEAL | 1 | | |
| 11 | 26 | 816818 | SEAL-OIL | 1 | | |
| 12 | 10 | 801332604 | SCREW | 1 | | |
| 13 | 30 | 816819 | BEARING-BALL | 2 | | |
| 14 | | 816820 | SHAFT | 1 | | |
| 15 | 25 | 801333850 | O RING | 1 | | |
| 16 | 13 | 811418 | LOCKWASHER | 4 | | |
| 17 | 11 | 811417 | NUT | 4 | | |
| 18 | 32 | 805017 | HOSE | 1 | | |
| 19 | 54 | 815504220 | CLAMP | 1 | | |
| 20 | 32 | 816174A 1 | HOSE | 1 | | |
| 21 | 54 | 815504232 | CLAMP | 3 | | |
| 22 | 32 | 816173 | REDUCER-HOSE | 1 | | |