



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	816248	SEAWATER PUMP ASSEMBLY	1		
2	10	801332608	SCREW	6		
3		801332607	COVER	1		
4	27	801332606	GASKET	1		
5	47	816814T	IMPELLER	1		
6		816813	CAM	1		
7	12	801332601	WEAR PLATE	1		
8	53	816815	RETAINING RING	1		
9	23	816816	SPACER	1		
10		816817	MECHANICAL SEAL	1		
11	26	816818	OIL SEAL	1		
12	10	801332604	SCREW	1		
13	30	816819	BALL BEARING	2		
14		816820	SHAFT	1		
15	25	801333850	O RING	1		
16	13	811460	LOCKWASHER	4		
17	11	40021	NUT	4		
18	32	805017	HOSE	1		
19	54	815504228	CLAMP	2		
20	32	816174A	HOSE	1		
21	54	815504232	CLAMP	2		
22	32	816173	HOSE REDUCER	1		