



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	46	816248	PUMP ASSEMBLY-SEAWATER	1		
2	10	801332608	SCREW	6		
3		801332607	COVER	1		
4	27	801332606	GASKET	1		
5	47	816814T	IMPELLER	1		
6		816813	CAM	1		
7	12	801332601	WEAR PLATE	1		
8	53	816815	RING-RETAINING	1		
9	23	816816	SPACER	1		
10		816817	SEAL	1		
11	26	816818	SEAL-OIL	1		
12	10	801332604	SCREW	1		
13	30	816819	BEARING-BALL	2		
14		816820	SHAFT	1		
15	25	801333850	O-RING	1		
16	13	811418	LOCKWASHER	4		
17	11	811417	NUT	4		
18	32	889897	HOSE	1		
19	54	815504220	CLAMP	1		
20	32	816174A	1 HOSE	1		
21	54	815504232	CLAMP	3		
22	32	816173	REDUCER-HOSE	1		
23	32	889500	HOSE	1		1
24		99356A	2 COOLER-FUEL	1		
25		889895	BRACKET-Fuel Cooler	1		1
26	54	18904	CLAMP	1		