



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	862613	HARNESS, Engine Primary	1		
1	84	862611	HARNESS, ECM	1		
2	84	899753	HARNESS, Injector, Glow Plug	1		
3	11	853468	NUT, (M8)	6		
4	54	853223	CLAMP	2		
5	11	853185	NUT	1		
6	12	853186	WASHER	1		
7	54	853187	CLAMP	1		
8	10	40094 16	SCREW, (M6 x 16)	2		
9		853189	RELAY, Glow Plug	1		
-	26	853190	SEAL	1		
-	11	853191	NUT	2		
10		853192	COVER, Relay	1		
11	54	853194	CLAMP	1		
12		853195	SENSOR (ICP, ECM Input)	1		
13		853203	SENDER (Oil Temperature, ECM In	1		
14	54	853197	CLAMP	4		
15	26	853198	SEAL	4		
16		853199	GLOW PLUG	8		
17		853201	SUPPORT	1		
18		853203	SENDER (Engine Coolant Temper	1		
19		853204	SENSOR (Cam Position, ECM Input	1		
-	10	853442	SCREW, (M8 x 16), Cam Sensor	1		
-	25	853206	O-RING, Cam Sensor	1		
-	26	853207	SEAL, Cam Sensor	1		
-		830796A 1	CONNECTOR ASSEMBLY	1		