



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		831001671	STARTER ASSEMBLY	1		16
-		831001672	STARTER ASSEMBLY	1		16
1		831121680	BOLT-Housing Set	6		
2		831101040	HOUSING ASSEMBLY-Start Driv	1		
3		831111350	BOSH-Drive Housing	1		
4		831151590	HOUSING-Start Drive	2		
5		831381250	PACKING	1		
6		831681320	RING-Retainer	1		
7		831021070	STOPPER-Pinion Set	1		
8		830111310	CLUTCH ASSEMBLY-Start	1		
9		831131210	LEVER-Pinion Drive	1		
10		831141070	PIN-Drive Lever Set	2		
11		831121700	BOLT-Housing Set	2		
12		832191110	WASHER-Start	2		
13		831121670	BOLT-Housing Set	2		
14		832191170	WASHER-Start	2		
15		832411050	WASHER-Contact Plate Lock	1		
16		835111110	O RING	1		
17		831121690	BOLT-Housing Set	1		
18		831261420	BEARING-Center	1		
19		831271080	PLATE-Center	1		
20		831371090	FELT-Oil	1		
21		831261430	BEARING-Center	1		
22		832191210	WASHER-Start	1		
23		831601390	ARMATURE ASSEMBLY-Start	1		
24		832191220	WASHER-Start	AR		15
25		831501670	SWITCH ASSEMBLY-Start Magn	1		
26		832201270	CORE ASSEMBLY-With Joint	1		
27		831541110	BOOT-Start Magnet	1		
28		831381260	PACKING	1		
29		831381270	PACKING	1		
30		832401480	COVER ASSEMBLY-Contractor	1		
31		832191120	WASHER-Start	1		
32	11	832311040	NUT-Start	1		
33		832191190	WASHER-Start	1		
34	11	832311050	NUT-Start	1		
35		831391050	LEADWIRE	1		
36		832311060	NUT-Start	1		
37		838731380	WASHER	1		
38		835106118	O RING	1		
39		832411020	WASHER-Contact Plate Lock	2		