



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	11	830108070	NUT	2	
2		836008270	WASHER	2	
3		830413930	BRACKET-Exhaust Riser Support	1	
4		836008270	WASHER	1	
5		838908110	BOLT	1	
6		830431260	BRACKET-Exhaust Riser Support	1	
7		836607010	CLAMP	1	
8	32	830233380	HOSE-Air	1	
9	10	839108302	BOLT	2	
10		836975103	CLAMP	4	
11	32	831132170	PIPE-Air Inlet	1	
12		831361590	BRACKET-Air Inlet Pipe Support	1	
13	10	839108202	BOLT	1	
14	32	830233268	HOSE-Air Inlet	2	16
15		835794030	PLATE- Caution	1	
16		833001041	INTERCOOLER ASSEMBLY	1	(SEE INTERCOOLER ASSY 833001041)
17	11	830006050	NUT	2	
18		839681360	BRACKET-Switch Mounting	1	
19		836006140	WASHER	2	
20		831006160	BOLT	2	
21	10	830114300	BOLT	4	
22	10	839108162	BOLT	6	
23	10	839108201	BOLT	2	
24		836911221	BRACKET-Solenoid Mounting	1	
25		833021050	BRACKET-Intercooler Mounting	1	
26		837202610	CLEANER ASSEMBLY-Air	1	(SEE CLEANER ASSY - AIR 220HP)
27	10	839110252	BOLT	2	
28		836901112	CLAMP	1	
29	32	830233375	HOSE-Air	1	
30		836994102	CLAMP	1	
31		831001751	TURBOCHARGER ASSEMBLY	1	(SEE TURBOCHARGER ASSY 831001751)
32	25	835113103	O RING	1	
33		831371010	ADAPTOR-Oil Supply	1	
34	13	838006150	LOCKWASHER	2	
35		831106300	BOLT	2	
36	12	835912111	WASHER	7	
37	10	831912179	BOLT	2	
38		830211080	ELBOW ASSEMBLY-Exhaust	1	16
39	19	833940104	PLUG-Core	6	
40	11	830910142	NUT	8	
41		830431260	BRACKET	1	