



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2022A 4	GEAR HOUSING ASSEMBLY, CO	1,1,,		9
-	1623	20748A 2	GEAR HOUSING ASSEMBLY, CO	,,1,		9
-	1623	2078A 3	GEAR HOUSING ASSEMBLY, CO	,,1,		9
1	1623	2022A 3	GEAR HOUSING ASSEMBLY SE	1,1,,		7
1	1623	2078A 1	GEAR HOUSING ASSEMBLY	,,1,		7
57		36288	CAM, SHAFT	1,1,1,1		
58		30625	FOLLOWER, CAM	1,1,1,1		
59		30624	SLIDE, CROSS PIN	1,1,1,1		
60	24	30622	SPRING, COMPRESSION - CAM	1,1,1,1		
61	15	30923A 1	SHIM, BEARING OUTER RACE	AR,AR,		
62	43	31886	FOWARD GEAR ASSEMBLY	1,1,,		
62	43	33135	FOWARD GEAR ASSEMBLY	,,1,		
63	31	30895	BEARING, ROLLER - FOWARD	1,1,1,1		
64	31	30894A 1	TAPERED ROLLER BEARING	1,1,1,1		
65	31	31092	CUP, TAPERED ROLLER BE	1,1,1,1		
66		34239	RATCHET, SLIDING CLUTCH	1,1,1,1		
67	17	30632	PIN, CROSS - RATCHET TO PR	1,1,1,1		
68	24	30893	SPRING, RETAINING - CROSS F	1,1,1,1		
69	44	32164	SHAFT, PROPELLER	1,1,1,1		
70	43	31887	REVERSE GEAR ASSEMBLY	1,1,,		
70	43	33136	REVERSE GEAR ASSEMBLY	,,1,		
71	12	30633	WASHER, THRUST - BEARIN	1,1,1,1		
72	30	31265	BEARING, BALL - REVERSE C	1,1,1,1		
73	15	29955A 1	SHIM, THRUST WASHER TO G	AR,AR,		
74	25	29976	"O" RING, BEARING CARRIER	1,1,1,1		
75		31294A 1	BEARING CARRIER ASSEMBLY	1,1,1,1		
76	31	30956	BEARING, ROLLER - BEARIN	1,1,1,1		
77	26	30550	OIL SEAL, BEARING CARRIER	2,2,2,2		
78	28	30281	KEY, LOCATING - BEARING CA	1,1,1,1		
79	12	29957	WASHER, GEAR HOUSING CO	1,1,1,1		
80		31037	OVER, GEAR HOUSING	1,1,1,1		
81	12	31013	WASHER, THRUST - BEARING C	1,1,1,1		
82		30581A 1	THRUST HUB AND WASHER AS	1,1,1,1		
83	12	29590	WASHER, CUPPED - THRUST	1,1,1,1		
84	12	31211	WASHER, SPLINED - PROPELLE	1,1,1,1		
85	14	31210	TAB WASHER, PROPELLER HUT	1,1,1,1		
86	11	29594	NUT, PROPELLER	1,1,1,1		
87		34127	TRIM TAB, GEAR HOUSING	1,1,1,1		
88	10	32470	SCREW, TRIM TAB TO GEAR HO	1,1,1,1		
89	10	30206	SCREW, GEAR HOUSING TO DR	1,1,1,1		
90	11	22179	NUT, DRIVE SHAFT HOUSING TO	2,2,2,2		