



					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1	1547	2411A 1	DRIVE SHAFT HOUSING ASSEMBLY	1	SEE PAGE 7 FOR PARTS BREAK		
2	19	29850	PLUG, TRIM TAB HOLE-DRIVE SH	1			
3	37	32655	DECAL, DRIVE SHAFT HOUSING	1			
4	37	32654	DECAL, DRIVE SHAFT HOUSING	1			
5	10	28634	SCREW, DRIVE SHAFT HOUSING	2			
6	12	20260	WASHER, DRIVE SHAFT HOUSING	2			
7	26	37259	OIL SEAL, DRIVE SHAFT HOUSING	1	SEE NOTE		
8	26	32511	OIL SEAL, GEAR CHAMBER DRIVE	1			
9	45	32583	DRIVE SHAFT, UPPER	1			
10	15	36178A 1	SHIM, BEARING CUP TO DRIVE SHAFT	1			
11	631	35990A 1	TAPERED ROLLER BEARING ASSEMBLY	1			
12	31	35991	CUP, TAPERED ROLLER BEARING	1			
13	43	36342A 1	GEAR ASSEMBLY, COMPLETE - DRIVE	1			
13	43	36219A 1	GEAR ASSEMBLY, COMPLETE - DRIVE	1			
13	43	35994A 2	GEAR ASSEMBLY, COMPLETE - DRIVE	1			
14	23	32591	SPACER, UPPER DRIVE SHAFT	1			
15	31	32575A 1	TAPERED ROLLER BEARING ASSEMBLY	1			
16	31	32576	CUP, TAPERED ROLLER BEARING	1			
17	15	32563A 1	SHIM, BEARING CUP TO TOP COVER	1			
18	12	32506	WASHER, GEAR AND BEARING	1			
19	11	22339	NUT, GEAR AND BEARING TO UNIVERSAL	1			
20	25	32546	"O" RING, TOP COVER SEALING	1			
21		32491	COVER, TOP - DRIVE SHAFT HOUSING	1			
22	10	32565	SCREW, TOP COVER TO DRIVE SHAFT	4			
23		35911A 1	UNIVERSAL JOINT ASSEMBLY	1			
24		36312	CROSS AND BEARING ASSEMBLY	2			
24		39384	YOKE, UNIVERSAL JOINT - GEAR	1			
24		39383	SOCKET, CENTER - UNIVERSAL JOINT	1			
24		39385A 1	YOKE ASSEMBLY - UNIVERSAL JOINT	1			
24	25	25439	"O" RING, UNIVERSAL JOINT	2			
25		35992	RETAINER, TAPERED ROLLER BEARING	1			
26		35983	RING, ROLLER BEARING RETAINER	1			
27	25	35984	"O" RING, OIL SEAL CARRIER	1			
28		35993A 1	CARRIER ASSEMBLY, OIL SEAL	1			
29	26	36054	OIL SEAL, CARRIER	1			
30	31	35988A 2	TAPERED ROLLER BEARING ASSEMBLY	1			
31	23	35985	SPACER, DRIVE GEAR ROLLER	1			
32	15	35980A 1	SHIM, BEARING CUP TO DRIVE SHAFT	1			
33	12	35981	WASHER, DRIVE GEAR TO UNIVERSAL	1			
34	11	22339	NUT, DRIVE GEAR TO UNIVERSAL	1			
35		22499A 2	COVER ASSEMBLY, WATER PUMP	1			