



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2406A 2	GEAR HOUSING ASSEMBLY, COM	1	SEE NOTE #1 BELOW	
1	1623	2406A 1	GEAR HOUSING ASSEMBLY	1		
2	16	29080	STUD, GEAR HOUSING TO D	1		
3	16	29078	STUD, GEAR HOUSING TO D	2		
4	16	36292	STUD, WATER PUMP BASE A	1		
5	16	30667	STUD, WATER PUMP BASE A	2		
6	31	35934	BEARING, ROLLER - DRIVE S	1		
7	17	21438	PIN, DOWEL - GEAR HOUSIN	2		
8	45	36386A 1	DRIVE SHAFT ASSEMBLY	1	SEE NOTE #2 BELOW	
9	17	30545	PIN, DRIVE SHAFT	1		
10	24	34576	SPRING, COMPRESSION - DF	1		
11	25	30613	"O" RING, UPPER - DRIVE SF	1		
12	43	35922	GEAR, PINION - DRIVE SHAFT	1		
13	11	35921	NUT, PINION GEAR TO DRIVE :	1		
14	15	33143A 1	SHIM, BEARING TO GEAR HOU AR	1		
15	31	36387A 1	TAPERED ROLLER BEARING A	1	SEE NOTE #2 BELOW	
16	31	35923	CUP, TAPERED ROLLER BEAR	1		
17	27	33146	GASKET, WATER PUMP BASE	1		
18	25	33145	"O" RING, WATER PUMP BASE	1		
19	46	34447A 1	WATER PUMP BASE ASSEMBL	1		
20	26	33144	OIL SEAL, WATER PUMP BAS	1		
21	26	31507	OIL SEAL, WATER PUMP BAC	1		
22	17	35973	DOWEL PIN, WATER PUMP E	2		
23	27	32433	GASKET, LOWER - WATER PUI	1		
24		32435	PLATE, FACE - WATER PUMP E	1		
25	27	32434	GASKET, UPPER - FACE PLATE	1		
26	46	32437A 3	WATER PUMP BODY ASSEMBL	1		
27		30915	INSERT, WATER PUMP BOD	1		
28	26	31507	OIL SEAL, WATER PUMP BOI	1		
29	12	36446	WASHER, WATER PUMP BOI	1		
30	26	36557	SEAL, RUBBER - WATER INLI	1		
31	47	30221	IMPELLER, WATER PUMP	1		
32	17	29967	PIN, IMPELLER DRIVE	1		
33	10	30720	SCREW, WATER PUMP BODY	1		
34	13	26992	LOCKWASHER, WATER PUMP	1		
35	11	35888	NUT, WATER PUMP BODY STL	2		
36	11	35814	NUT, WATER PUMP BODY STL	1		
37	25	30271	RING, RUBBER - CENTRIFUGAI	1		
38	23	29804	SLEEVE, GUIDE - WATER INLE	1		
39		35933	SHAFT, SHIFT - LOWER	1		
40	18	20222	CUP, RETAINING - SHIFT SHAF	1		