



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		35186	PLATE, TRANSOM	1	EARLY STYLE	
2	10	32695	SCREW, TRANSOM PLATE TO G	2	EARLY STYLE	
3	10	32529	SCREW, TRANSOM PLATE TO G	2	EARLY STYLE	
4	12	22248	WASHER, TRANSOM PLATE SCF	4	EARLY STYLE	
1		37278	PLATE, TRANSOM	1	LATE STYLE	
2	10	37269	SCREW, TRANSOM PLATE TO G	2*	LATE STYLE	8
3	10	37268	SCREW, TRANSOM PLATE TO G	2*	LATE STYLE	8
4	13	37272	LOCKWASHER, TRANSOM PLAT	4*	LATE STYLE	8
5	12	37271	WASHER, SQUARE - TRANSOM I	2*	LATE STYLE	8
6	10	26668	SCREW, SHIFT ACTUATING CA	1		
7	54	34050	CLAMP, SHIFT ACTUATING CABL	1		
8		30212	TERMINAL BLOCK, TRANSOM PL	1	NOT AS SHOWN	
9	10	33152	SCREW, TERMINAL BLOCK TO T	2		
10	10	30663	SCREW, TILT STOP SWITCH LEA	2		
11		32585	LEVER, SHIFT CONTROL - TRAN	1		
12	23	31758	SPACER, SHIFT CONTROL LEVEI	1		
13	16	32698	STUD, SHIFT CONTROL LEVER	1		
14	12	26825	WASHER, SHIFT CONTROL LEVE	2		
15	11	21528	NUT, SHIFT CONTROL LEVER TC	1		
16	10	22659	SCREW, SHIFT CABLE ASSEMBL	1		
17	23	31866	SPACER, SHIFT CABLE ASSEMBL	1		
18	12	31760	WASHER, SHIFT CABLE ASSEME	2		
19	11	20361	NUT, SHIFT CABLE ASSEMBLY T	1		
20	16	34069	STUD, SHIFT ACTUATING CABLE	1		
21	12	31760	WASHER, SHIFT ACTUATING CA	1		
22	11	20361	NUT, SHIFT ACTUATING CABLE	2		
23	38	32738	NAME PLATE, TRANSOM PLATE	1		
24	10	22290	SCREW, DRIVE - NAME PLATE T	2		
25	18	32857	COTTER PIN, SHIFT ACTUATING	1		
26	32	35015	TUBE, STEERING CABLE GUIDE	1		
27	11	35222	NUT, JAM - STEERING CABLE GL	2		
28	10	36289	SCREW, TRANSOM PLATE TO EI	2		
29	12	28421	WASHER, TRANSOM PLATE SCF	2		
30	23	36290	SPACER, TRANSOM PLATE SCRI	2		
31	12	32834	WASHER, TRANSOM PLATE SCF	2		
32	13	33734	LOCKWASHER, TRANSOM PLAT	2		
33	11	20220	NUT, TRANSOM PLATE TO ENGI	2		
34	12	21900	WASHER, GIMBAL HOUSING TO	2		
35	11	34087	NUT, GIMBAL HOUSING TO TRAI	2		
36		35187A 2	CABLE ASSEMBLY, SHIFT ACTUA	1		
37		37511A 1	CORE WIRE AND ANCHOR ASS	1		