



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1547	2411A17	DRIVE SHAFT HOUSING ASSEM	1	
2	23	32632	BUSHING, DRIVE SHAFT HOUS	1	
3	16	30929	STUD, DRIVE SHAFT HOUSING	2	
4	22	31704	PLUG, PIPE-DRIVE SHAFT HOL	1	
5	19	32652	WELCH PLUG, DRIVE SHAFT H	1	
6	27	35996	GASKET, DRIVE SHAFT HOUSI	1	
7	11	34933	NUT, GEAR HOUSING TO DRIVE	3	
8		37829A	ARM ASSEMBLY, REVERSE HOO	1	
9		32520	HOOK, REVERSE	2	
10	10	32527	SCREW, REVERSE HOOKS TO	1	
11	12	29245	WASHER, REVERSE HOOKS TO	4	
12	11	33825	NUT, REVERSE HOOKS TO RE	1	
13	24	37827	SPRING, TENSION-REVERSE H	2	
14	12	34931	WASHER, REVERSE HOOK AR	1	
15	10	32694	SCREW, REVERSE HOOK ARM T	1	
16	24	32659	SPRING, TENSION-REVERSE HO	1	
17		32588A	STOP ASSEMBLY, REVERSE HOI	1	
18	10	32524	SCREW, REVERSE HOOK ARM S	1	
19	11	33826	NUT, REVERSE HOOK ARM STO	1	
20		32628	SHAFT, SHIFT-INTERMEDIATE	1	
21	12	32666	WASHER, INTERMEDIATE SHIF	1	
22	18	32665	COTTER PIN, INTERMEDIATE SF	1	
23		38002A	BELL HOUSING ASSEMBLY	1	
--	27	35996	GASKET, DRIVE SHAFT HOUSI	1	(SEE REFERENCE #6)
24	22	33066	CONNECTOR, WATER HOSE	1	
25	22	32125	CONNECTORM SHIFT ACTUATIN	1	
26	10	25612	SCREW, DRIVE-BELL HOUSIN	8	
27		31014	BUMPER, BELL HOUSING	1	
28	23	35088	BUSHING, UPPER SHIFT SHA	1	
29	27	35982	GASKET, RUBBER-BELL HOU	1	
30	25	33504	"O" RING, BELL HOUSING	1	
31	12	38000	WASHER, SYNTHANE-BELL H	2	
32	16	35937	STUD, BELL HOUSING TO DF	6	
33	12	35935	WASHER, BELL HOUSING TO DF	6	
34	11	34933	NUT, BELL HOUSING TO DRIVE	6	
35	10	36398	SCREW, PLUG-BELL HOUSING	2	
36	22	31345	FITTING, GREASE-BELL HOUSIN	2	
37		29359	LUBRICAP, BELL HOUSING GRE	2	
38		36223A	BELLOWS ASSEMBLY, UNIVERS.	1	
39	54	31765	CLAMP, UNIVERSAL JOINT BELL	1	
40	54	31765	CLAMP UNIVERSAL JOINT BELL	1	