



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2511A 3	GEAR HOUSING ASSEMBLY, CO	1		
-	1623	2511A 5	GEAR HOUSING ASSEMBLY, CO	1	8	
1	1623	2511A 1	GEAR HOUSING ASSEMBLY	1		
2	17	37972	PIN, SHIFT CRANK - GEAR HC	1		
3	16	29080	STUD, GEAR HOUSING TO D	1		
4	16	45198	STUD, GEAR HOUSING TO D	2		
5	16	36292	STUD, WATER PUMP BASE A	1		
6	16	30667	STUD, WATER PUMP BASE A	2		
7	31	35934	BEARING, ROLLER - DRIVE S	1		
8		39235	SLEEVE, THREADED - GEAR	1		
9	17	21438	PIN, DOWEL - GEAR HOUSIN	2		
10	45	36386A 1	DRIVE SHAFT ASSEMBLY	1		
11	17	30545	PIN, DRIVE SHAFT	1		
12	24	34576	SPRING, COMPRESSION - DF	1		
13	25	30613	"O" RING, UPPER - DRIVE SF	1		
14	43	35922	GEAR, PINION DRIVE - SHAFT	1		
16	15	33143A 1	SHIM, DRIVE SHAFT BEARIN T	AF		
17	31	36387A 1	TAPERED ROLLER BEARING A	1		
18	31	35923	CUP, TAPERED ROLLER BEA	1		
19	27	33146	GASKET, WATER PUMP BASE	1		
20	25	33145	"O" RING, WATER PUMP BASE	1		
21	46	34447A 1	WATER PUMP BASE ASSEMBL	1		
22	26	33144	OILSEAL, WATER PUMP BAS	1		
23	26	31507	OIL SEAL, WATER PUMP BAS	1		
24	17	35973	DOWEL PIN, WATER PUMP E	2		
25	27	32433	GASKET, LOWER - WATER PUI	1		
26		32435	PLATE, FACE - WATER PUMP BA	1		
27	27	32434	GASKET, UPPER - FACE PLATE	1		
28	46	37433A 1	WATER PUMP BODY ASSEMBL	1		
29		30915	INSERT, WATER PUMP BOD	1		
30	26	31507	OIL SEAL, WATER PUMP BOI	1		
31	12	36446	WASHER, WATER PUMP BODY	1		
32	26	36557	SEAL, RUBBER - WATER INLI	1		
32	26	38970	SEAL, RUBBER - WATER INLI	1		
33	47	30221	IMPELLER, WATER PUMP	1		
34	17	29967	PIN, IMPELLER DRIVE	1		
35	10	30720	SCREW, WATER PUMP BODY	1		
36	13	26992	LOCKWASHER, WATER PUMP	1		
37	11	35888	NUT, WATER PUMP BODY STL	2		
38	11	35814	NUT, WATER PUMP BODY STL	1		
39	26	20271	RING, RUBBER, CENTRIFUGAL	1		