



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1547	2411A17	DRIVE SHAFT HOUSING ASSEMBLY	1	
2	19	29850	PLUG, TRIM TAB HOLE-DRIVE SHAFT HOUSING	1	
3	37	32655	DECAL, DRIVE SHAFT HOUSING	1	
4	37	32654	DECAL, DRIVE SHAFT HOUSING	1	
3&4	37	39345A 1	DECAL SET, DRIVE SHAFT HOUSING	1	8
5	10	28634	SCREW, DRIVE SHAFT HOUSING	2	
6	12	20260	WASHER, DRIVE SHAFT HOUSING	2	
7	26	37259	OIL SEAL, DRIVE SHAFT HOUSING	1	
8	26	32511	OIL SEAL, GEAR CHAMBER-DRIVE SHAFT HOUSING	1	
9	45	32583	DRIVE SHAFT, UPPER	1	
10	15	36178A 1	SHIM, BEARING CUP TO DRIVE SHAFT HOUSING	1	
11	31	35990A 1	TAPERED ROLLER BEARING ASSEMBLY	1	
12	31	35991	CUP TAPERED ROLLER BEARING	1	
13	43	36342A 1	GEAR ASSEMBLY, COMPLETE - M	1	
13	43	36219A 1	GEAR ASSEMBLY, COMPLETE - M	1	
13	43	35994A 2	GEAR ASSEMBLY, COMPLETE - M	1	
14	23	32591	SPACER, UPPER DRIVE SHAFT	1	
15	31	32575A 1	TAPERED ROLLER BEARING ASSEMBLY	1	
16	31	32576	CUP, TAPERED ROLLER BEARING	1	
17	15	32563A 1	SHIM, BEARING CUP TO TOP COVER	1	
18	12	32506	WASHER, GEAR AND BEARING	1	
19	11	22339	NUT, GEAR AND BEARING TO UNIVERSAL JOINT	1	
20	25	32546	"O" RING, TOP COVER SEALING	1	
21		32491	COVER, TOP-DRIVE SHAFT HOUSING	1	
22	10	32565	SCREW, TOP COVER TO DRIVE SHAFT HOUSING	4	
23		35911A 1	UNIVERSAL JOINT ASSEMBLY	1	
24		39384	YORK, UNIVERSAL JOINT-GEAR	1	
25		39383	SOCKET, CENTER-UNIVERSAL JOINT	1	
26		36312	CROSS AND BEARING ASSEMBLY	2	
27		39385A 1	YORK ASSEMBLY-UNIVERSAL JOINT	1	
28	25	25439	"O" RING, UNIVERSAL JOINT	2	
29		35992	RETAINER, TAPERED ROLLER BEARING	1	
30		35983	RING, ROLLER BEARING RETAINER	1	
31	25	35984	"O" RING, OIL SEAL CARRIER	1	
32		35993A 1	CARRIER ASSEMBLY, OIL SEAL	1	
33	26	36054	OIL SEAL, CARRIER	1	
34	31	35988A 2	TAPERED ROLLER BEARING ASSEMBLY	1	
35	23	35985	SPACER, DRIVE GEAR ROLLER BEARING	1	
36	15	35980A 1	SHIM, BEARING CUP TO DRIVE SHAFT HOUSING	1	
37	12	35981	WASHER, DRIVE GEAR TO UNIVERSAL JOINT	1	
38	11	22339	NUT, DRIVE GEAR TO UNIVERSAL JOINT	1	