



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		38003A	GIMBAL RING ASSEMBLY	1		
2	31	32538	BEARING, ROLLER-GIMBAL RING	1		
3	26	32541	OIL SEAL, GIMBAL RING	2		
4	23	39273	SPACER, GIMBAL RING	1		
5	22	23612	FITTING, GREASE-GIMBAL RING	1		
6		29359	LUBRICAP, GIMBAL RING GREASE	1		
7	17	38031	PIN, HINGE-GIMBAL RING TO BUSHING	2		
8	17	35571	PIN, HINGE PIN RETAINING-GIMBAL RING	2		
9	55	35998	SHOCK ABSORBER	2		
10	23	32848	BUSHING, RUBBER-SHOCK ABSORBER	4		
11	55	32607	PIN, SHOCK ABSORBER TO GIMBAL RING	2		
12	17	35571	PIN, SHOCK ABSORBER PIN RETAINING-GIMBAL RING	2		
13	17	35779A	PIN ASSEMBLY, SHOCK ABSORBER	1		
14	12	35777	WASHER, SHOCK ABSORBER	2		
15	11	35778	NUT, SHOCK ABSORBER TO DISCONNECT	2		
16	17	35813A	TILT PIN ASSEMBLY, GIMBAL RING	1		
17	11	35814	NUT, TILT ADJUSTMENT PIN	2		
18		32688A	TILT STOP SWITCH ASSEMBLY, (BOLT AND NUT DISCONNECT)	1		
19		39672A	TILT STOP SWITCH ASSEMBLY, (QUICK-DISCONNECT)	1		
20	10	20367	SCREW, TILT STOP SWITCH COVER	2		
21	23	31902	SPACER, TILT STOP SWITCH TO GIMBAL RING	1		
22		31899	PLATE, RETAINING-TILT STOP SWITCH	1		
23	10	22387	SCREW, RETAINING PLATE AND GIMBAL RING	2		
24		32637	STRAP, TILT STOP SWITCH RETAINING	1		
25	11	20110	NUT, RETAINING PLATE AND SWITCH	2		
26		31897	LEVER, TILT STOP SWITCH ACTUATOR	1		
27	10	31903	SCREW, TILT STOP SWITCH ACTUATOR	2		
28		32630	LEVER, STEERING-UPPER SWIVEL	1		
29		32582	SHAFT, UPPER SWIVEL-GIMBAL RING	1		
30	22	32561	PLUG, PIPE-UPPER SWIVEL SHAFT	1		
31	12	32996	WASHER, UPPER SWIVEL SHAFT	AR		
31	12	32997	WASHER, UPPER SWIVEL SHAFT	AR		
32	10	32995	SCREW, STEERING LEVER TO UPPER SWIVEL	1		
33	11	20696	NUT, STEERING LEVER TO UPPER SWIVEL	1		
34	10	33022	SCREW, UPPER SWIVEL SHAFT	1		
35	12	20546	WASHER, UPPER SWIVEL SHAFT	1		
36	16	32568	STUD, PIVOT-STEERING LEVER	1		
37	12	25909	WASHER, STEERING LEVER PIVOT	3		
38	12	29330	WASHER, NYLON-STEERING LEVER	1		
39		29332A	ROD, STEERING LINK-STEERING LEVER	1		
40		29332B	BALL, STEEL-STEERING LEVER	1		