



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1544	3442A 1	DRIVE SHAFT HOUSING ASSEM	1	
2	19	47579	PLUG, TRIM TAB HOLE-DRIVE SH	1	
3	27	32277	GASKET, DRIVE SHAFT HOUSINI	1	
4	32	35127	TUBE, OIL-DRIVE SHAFT HOUSIN	1	
5		35231A 1	COVER ASSEMBLY, SHIFT FORK	1	
6		26183A 5	EMBLEM ASSEMBLY, SHIFT FO	1	
7	22	32018	PLUG, OIL FILLER-SHIFT FORK	1	
8	25	35126	RING, OIL FILLER PLUG	1	
9	27	32366	GASKET, SHIFT FORK COVER	1	
10	10	31716	SCREW, SHIFT FORK COVER TO	6	
11	22	20025	PLUG, PIPE-OIL CHANNEL-DRIVE	1	
12	25	32068	"O" RING, TOP COVER SEALING	1	
13	15	32363A 1	SHIM, TOP COVER TO DRIVE SH	AR	
14		49271	COVER, TOP-DRIVE SHAFT HOU	1	
15	10	31985	SCREW, TOP COVER TO DRIVE	5	
16	52	49270	CLUTCH, SLIDING-SHIFT FORK	1	
17	43	49265A 2	GEAR ASSEMBLY, COMPLETE (IF	1	
18	15	49724A 1	SHIM, WASHER TO DRIVE SHAF	AR	
19	12	49273	WASHER, UPPER GEAR TAPERE	1	
20	31	35928A 2	TAPERED ROLLER BEARING AS:	1	
21	23	49267	SPACER, TAPERED ROLLER BI	1	
22	14	32054	TAB WASHER, TAPERED ROLLE	1	EARLY MODELS ONLY
23	11	32060	NUT, TAPERED ROLLER BEARIN	1	
24	43	49265	GEAR, REVERSE	1	
25		49268	RETAINER, LOWER GEAR TAPER	1	
26	10	36375	SCREW, SET-TAPERED ROLLER	2	
27	11	26484	NUT, JAM-TAPERED ROLLER BE	2	
28	31	35928A 2	TAPERED ROLLER BEARING AS:	1	
29	23	49267	SPACER, TAPERED ROLLER BI	1	
30	15	49264A 1	SHIM, BEARING CUP TO DRIVE S	AR	
31	14	32054	TAB WASHER, TAPERED ROLLE	1	EARLY MODELS ONLY
32	11	32060	NUT, TAPERED ROLLER BEARIN	1	
33		36013A 1	UNIVERSAL JOINT ASSEMBLY, F	1	15 1/2" "U" JOINT COUPLING YI
33		52722A 1	UNIVERSAL JOINT ASSEMBLY, F	1	11 1/2" "U" JOINT COUPLING YI
34		39495	YOKE, UNIVERSAL JOINT (GEA	1	
35		36312	CROSS AND BEARING ASSEME	2	
36		39383	SOCKET, CENTER-UNIVERSAL	1	
37		39496	YOKE, UNIVERSAL JOINT (COU	1	
37		52721	YOKE, UNIVERSAL JOINT (COU	1	
38	25	25439	"O" RING, UNIVERSAL JOINT	2	
39		49287	RETAINER, PINION GEAR ROLLE	1	