



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1625	3503A 3	GEAR HOUSING ASSEMBLY, CO	1	
1	1625	3503A 1	GEAR HOUSING ASSEMBLY	1	
2	31	49920	BEARING, ROLLER-DRIVE SH	1	
3	45	49919	DRIVE SHAFT	1	
4	43	49672	GEAR, PINION-DRIVE SHAFT	1	
5		34953	SHIELD, OIL	1	
6	11	31538	NUT, PINION GEAR TO DRIVE	1	
7	15	20928A 1	SHIM, BEARING TO GEAR HOU	AR	
8	30	32165	BEARING, BALL-DRIVE SHAFT	1	
9	53	31539	RING, SNAP-BALL BEARING TC	1	
10	15	20928A 1	SHIM, DRIVE SHAFT BALL BEA	AR	
11		34956	RETAINER, BALL BEARING DR	1	
12	10	30225	SCREW, BALL BEARING RETAI	4	
13	26	33613	SEAL, OIL TUBE-BALL BEARIN	1	
14	10	28634	SCREW, GEAR HOUSING GRE	1	
15	12	20260	WASHER, GEAR HOUSING GRI	1	
16	15	38374A 1	SHIM, BEARING CUP TO GEAR	AR	
17	31	38356A 1	TAPERED ROLLER BEARING A	1	
18	31	38357	CUP, TAPERED ROLLER BEA	1	
19		49918	ADAPTOR, TAPERED ROLLER	1	
20	43	31526	GEAR, PROPELLER-PROPELLE	1	
21	31	30894A 1	TAPERED ROLLER BEARING A	1	
22	31	31092	CUP, TAPERED ROLLER BEA	1	
23	17	31537	PIN, DOWEL-PROPELLER GEA	1	
24	44	32245	SHAFT, PROPELLER	1	
25	15	31535A 1	SHIM, BEARING CARRIER TO C	AR	
26		34955	CARRIER, BEARING-PROPELLE	1	
27	25	31534	"O" RING, BEARING CARRIER	1	
28		32248	RING, BALL BEARING TO GEAR	1	
29		32244A 1	COVER ASSEMBLY, GEAR HOL	1	
30	26	31554	OIL SEAL, GEAR HOUSING C	1	
31	30	20840	BEARING, BALL-GEAR HOUSI	1	
32	12	31536	WASHER, GEAR HOUSING COV	1	
33		32247	RETAINER, GEAR HOUSING CC	1	
34		31643A 1	THRUST HUB AND WASHER AS	1	
35	12	31642	WASHER, CUPPED-THRUST H	1	
36	14	31644	TAB WASHER, PROPELLER SHA	1	
37	11	31608	NUT, PROPELLER	1	
38		31640A 1	TRIM TAB, GEAR HOUSING	1	
39	10	49354	SCREW, TRIM TAB TO GEAR HO	1	
40		22209	MAGNET, GEAR HOUSING	1	