



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		32276A	2 PLATE ASSEMBLY, TRANSOM - C	1	
1		53042A	2 PLATE ASSEMBLY, TRANSOM - C	1	
2		34762A	1 PLATE ASSEMBLY, INHIBITOR	1	
3	10	34763	SCREW, INHIBITOR PLATE T	2	
4		31636	SEAL, RUBBER - OUTER TRAN	1	
5		32795	LINER, OUTER TRANSOM PLA	1	
6		49282A	4 PLATE ASSEMBLY, TRANSOM - I	1	
7	10	35624	BOLT, OUTER TRANSOM PLATE	8	
8	12	32620	WASHER, RUBBER - OUTER TR	8	
9	12	21900	WASHER, OUTER TRANSOM PL	8	
10	11	34087	NUT, OUTER TRANSOM PLATE	8	
11	19	49434	CAP, TRANSOM PLATE	1	
12		34056	COVER, LOCK-IN LIMIT SWITCH	1	
13	10	22794	SCREW, COVER TO INNER TRAN	2	
14	54	39788	CLAMP, CUT-OUT SWITCH LEAD	2	
15		22789	"D" WASHER, CUT-OUT SWITCH	2	
16		52757	CLAMP NUT, STEERING LEVER	1	
17	10	47258	SCREW, LOCKING - CLAMP NUT	1	
18	12	26168	WASHER, CLAMP NUT LOCKING	1	
19	19	35684	WELCH PLUG, INNER TRANSOM	1	
20	10	24644	SCREW, SHIFT CABLE TO TRAN	1	
21	12	29245	WASHER, SHIFT CABLE SCREW	1	
22	11	20361	NUT, SHIFT CABLE SCREW	1	
23		52853A	1 ARM ASSEMBLY, CUT-OUT SWIT	1	
24	24	32922	SPRING, COMPRESSION - SWI	1	
25		32464	PLUNGER, SWITCH ACTUATIN	2	
26		33501	RETAINER, SPRING AND PLUK	1	
27	16	20789	STUD, SHIFT ACTUATING CABI	1	
28	12	29245	WASHER, SWITCH ACTUATING	1	
29	11	20361	NUT, SWITCH ACTUATING ARM	1	
30	16	32467	STUD, SWITCH ACTUATING ARM	1	
31	23	26841	BUSHING, SWITCH ACTUATING	2	
32	12	20546	WASHER, SWITCH ACTUATING	1	
33	11	35814	NUT, SWITCH ACTUATING ARM	1	
34		49646A	1 SWITCH ASSEMBLY, CUT-OUT -	1	
35	10	30902	SCREW, CUT-OUT SWITCH TO II	2	
36		49406A	1 ARM ASSEMBLY, SHIFT CABLE M	1	
37	16	25385	STUD, MOUNTING ARM TO LIK	1	
38		49414	LINK ROD	1	
39	11	20586	NUT, LINK ROD TO MOUNTING	1	
40	10	27990	SCREW, SHIFT CABLE ASSEMBL	1	