



| Parts List | | | | | | |
|------------|-------|--------|-----------------------------|-----|-------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 47342A | TRIM CYLINDER ASSEMBLY, COI | 2 | | |
| 2 | 17 | 49279 | PIN, ANCHOR-DRIVE SHAFT HOL | 1 | | |
| 3 | 12 | 47395 | WASHER, DRIVE SHAFT HOUSIN | 2 | | |
| 4 | 24 | 49593 | SPRING, DRIVE SHAFT HOUSINC | 2 | | |
| 5 | 23 | 47392 | BUSHING, RUBBER-DRIVE SHAF | 4 | | |
| 6 | 12 | 47394 | WASHER, DRIVE SHAFT HOUSIN | 2 | | |
| 7 | 11 | 35000 | NUT, DRIVE SHAFT HOUSING AN | 2 | | |
| 8 | 17 | 49278 | PIN, ANCHOR-TRIM CYLINDER T | 1 | | |
| 9 | 12 | 47395 | WASHER, GIMBAL RING ANCHOR | 2 | | |
| 10 | 24 | 49593 | SPRING, GIMBAL RING ANCHOR | 2 | | |
| 11 | 23 | 47392 | BUSHING, RUBBER-GIMBAL RINI | 4 | | |
| 12 | 12 | 47394 | WASHER, GIMBAL RING ANCHOR | 2 | | |
| 13 | 11 | 35000 | NUT, GIMBAL RING ANCHOR PIN | 2 | | |
| 14 | 32 | 47373 | HOSE, HYDRAULIC-CONNECTOF | 4 | | |
| 15 | 32 | 49433 | HOSE, HYDRAULIC-CONNECTOF | 1 | | |
| 16 | 23 | 35977 | GROMMET, RUBBER-HYDRAUI | 1 | | |
| 17 | 32 | 49433 | HOSE, HYDRAULIC-CONNECTOF | 1 | NON TRANSOM MOUNTED ENC | |
| 17 | 32 | 53861 | HOSE, HYDRAULIC-CONNECTOF | 1 | TRANSOM MOUNTED ENGINE | |
| 18 | 23 | 35977 | GROMMET, RUBBER-HYDRAUI | 1 | | |
| 19 | | 36135 | COVER, INLET-TRANSOM | 2 | | |
| 20 | 27 | 36079 | GASKET, INLET COVER | 2 | | |
| 21 | 10 | 33684 | SCREW, INLET COVER TO TRAN | 4 | | |
| 22 | 12 | 30971 | WASHER, INLET COVER SCREW | 4 | | |
| 23 | 11 | 33825 | NUT, INLET COVER SCREW | 4 | | |
| 24 | 54 | 22740 | CLIP HYDRAULIC HOSE TO TRAI | 1 | | |
| 25 | 10 | 30663 | SCREW, HYDRAULIC HOSE CLIP | 1 | | |
| 26 | | 22789 | "D" WASHER, HYDRAULIC HOSE | 1 | | |
| 27 | 32 | 52951A | TUBE ASS'Y, PUMP TO REVERSE | 1 | | |