



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		45060A 7	HYDRAULIC PUMP ASSEMBLY	1		
2	25	26834	"O" RING, HYDRAULIC PUMP T	4		
3	10	46318	SCREW, VENT-HYDRAULIC PU	1		
4	13	46317	LOCKWASHER, SEALING-VENT	1		
5	10	28634	SCREW, FILLER-HYDRAULIC P	1		
6	12	20260	WASHER, SEALING-HYDRAULI	1		
7	54	37282	CLAMP, HYDRAULIC PUMP HAR	1		
8		37281	"D" WASHER, HYDRAULIC PUM	1		
9	38	45372	DECAL, INSTRUCTIONS-HYDRAL	1		
10		48077A 6	CONTROL VALVE ASSEMBLY (NC	1		
10		48077A 8	CONTROL VALVE ASSEMBLY (TF	1		
--	25	26834	"O" RING, HYDRAULIC PUMP T	4		
11	22	48169	ELBOW, CONTROL VALVE	1		
12	10	21091	SCREW, CONTROL VALVE TO H	4		
13	13	26992	LOCKWASHER, CONTROL VALVE	4		
14		49405	BRACKET, MOUNTING-HYDRAUL	1		
15	10	31984	SCREW, MOUNTING BRACKET T	3		
16	13	20305	LOCKWASHER, MOUNTING BRA	3		
17	10	26066	SCREW, HYDRAULIC PUMP TO F	3		
18	12	20546	WASHER, HYDRAULIC PUMP SC	3		
19	11	21528	NUT, HYDRAULIC PUMP SCREW	3		
20		45325	CONNECTOR AND HARNESS	1		
21		45559	TERMINAL BLOCK, HYDRAULIC	1		
22	10	28192	SCREW, TERMINAL BLOCK TO H	2		
23	10	30663	SCREW, HARNESS LEADS TO TE	2		
24		25661	STARTER SOLENOID	1		
25	13	26996	LOCKWASHER, STARTER SOLEI	2		
26	11	20645	NUT, STARTER SOLENOID TERM	2		
27	13	26993	LOCKWASHER, STARTER SOLEI	2		
28	11	20083	NUT, STARTER SOLENOID TERM	2		
29		46265	BOOT, RUBBER-STARTER SOLE	2		
30	10	34290	SCREW, STARTER SOLENOID TI	2		
31	13	26992	LOCKWASHER, STARTER SOLEI	2		
32	11	21825	NUT, STARTER SOLENOID SCRE	2		
33		45321	BRACKET, MOUNTING-STARTEF	1		
34	10	21140	SCREW, MOUNTING BRACKET T	2		
35	13	26992	LOCKWASHER, MOUNTING BRA	2		
36	13	27660	LOCKWASHER, HYDRAULIC PUM	1		
37	11	20645	NUT, MOUNTING BRACKET TO F	1		
--		48413A 2	CONTROL PANEL ASSEMBLY	1	COMPLETE (GREEN, WHITE AN	
--		48413A 5	CONTROL PANEL ASSEMBLY	1	COMPLETE (RED/GREEN/WHI	