



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1625	1929A 2	GEAR HOUSING ASSEMBLY, CO	1,		
-	1625	1982A 1	GEAR HOUSING ASSEMBLY, CO	1,		
-		16252007A	GEAR HOUSING ASSEMBLY, CO	1,		
1	1625	1929A 1	GEAR HOUSING ASSEMBLY	1,		
1	1625	1982A 1	GEAR HOUSING ASSEMBLY	1,		
1	1625	2007A 1	GEAR HOUSING ASSEMBLY	1,		
2	31	31544	BEARING, ROLLER - DRIVE S	1,1,1		
3	45	31542	DRIVE SHAFT	1,1,1		
4	43	31527	GEAR, PINION - DRIVE SHAFT	1,1,1		
5	11	31538	NUT, PINION GEAR TO DRIVE	1,1,1		
6	15	20928A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR,		
7	30	32165	BEARING, BALL - DRIVE SHAFT	1,1,1		
8	53	31539	RING, SNAP - BALL BEARING T	1,1,1		
9	15	20928A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR,		
10		31541	RETAINER, BALL BEARING - DF	1,1,1		
11	10	30225	SCREW, BALL BEARING RETAI	4,4,4		
12	10	28634	SCREW, GEAR HOUSING GRE	1,1,1		
13	12	20260	WASHER, GEAR HOUSING GRI	1,1,1		
14	15	31154A 1	SHIM, TAPERED ROLLER BEAF	AR,AR,		
15	31	31215A 1	TAPERED ROLLER BEARING A	1,1,1		
16	31	31216	CUP, TAPERED ROLLER	1,1,1		
17		31556	ADAPTOR, TAPERED ROLLER	1,1,1		
18	43	31526	GEAR, PROPELLER - PROPELL	1,1,1		
19	31	30894A 1	TAPERED ROLLER BEARING A	1,1,1		
20	31	31092	CUP, TAPERED ROLLER BEA	1,1,1		
21	17	31537	PIN DOWEL - PROPELLER GEA	1,1,1		
22	44	32245	SHAFT, PROPELLER	1,1,1		
23	15	31535A 1	SHIM, BEARING CARRIER TO C	AR,AR,		
24		31533	CARRIER, BEARING - PROPELL	1,1,1		
25	25	31534	>"O" RING, BEARING CARRIER T	1,1,1		
26		32248	RING, BALL BEARING TO GEAR	1,1,1		
27		32244A 1	COVER ASSEMBLY, GEAR HOL	1,1,1		
28	26	31554	OIL SEAL, GEAR HOUSING CI	1,1,1		
29	30	20840	BEARING, BALL - GEAR HOU	1,1,1		
30	12	31536	WASHER, GEAR HOUSING CO	1,1,1		
31		32247	RETAINER, GEAR HOUSING CO	1,1,1		
32		31643A 1	THRUST HUB AND WASHER A	1,1,1		
33	12	31642	WASHER, CUPPED - THRUST H	1,1,1		
34	14	31644	TAB WASHER, PROPELLER SH	1,1,1		
35	11	31608	NUT, PROPELLER - PROPELLER	1,1,1		
36		31640	TRIM TAB, GEAR HOUSING	1,1,1		