



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32276A	2 PLATE ASSEMBLY, TRANSOM-OUT	1		
2		34762A	1 PLATE ASSEMBLY, INHIBITOR-	1		
3	10	34763	1 SCREW, INHIBITOR PLATE T	2		
4		31636	1 SEAL, RUBBER-OUTER TRANS	1		
5		32795	1 LINER, OUTER TRANSOM PLA	1		
6		34193	1 PLATE, TRANSOM-INNER	1		
7	10	35624	8 BOLT, OUTER TRANSOM PLATE	8		
8	12	32620	8 WASHER, RUBBER-OUTER TRAI	8		
9	12	21900	8 WASHER, OUTER TRANSOM PL	8		
10	11	34087	8 NUT, OUTER TRANSOM PLATE	8		
11	22	25094	1 FITTING, GREASE (45)-INNER TF	1		
12		29359	1 LUBRICAP, INNER TRANSOM PL	1		
13	37	32049	1 LABEL, ENGINE ROTATION-INNE	1		
14		34056	1 COVER, LOCK-IN LIMIT SWITCH-I	1		
15	10	26668	2 SCREW, COVER TO INNER TRAP	2		
16		32463A	2 ARM ASSEMBLY, CUT-OUT SWIT	1		
17		32464	2 PLUNGER, SWITCH ACTUATING	2		
18	24	32922	1 SPRING, COMPRESSION-SWIT	1		
19		33501	1 RETAINER, SPRING AND PLUN	1		
20	16	20075	1 STUD, SHIFT ACTUATING CABI	1		
21	12	29245	1 WASHER, SWITCH ACTUATING	1		
22	11	20361	1 NUT, SWITCH ACTUATING ARM	1		
23	23	26841	2 BUSHING, SWITCH ACTUATING	2		
24	16	32467	1 STUD, SWITCH ACTUATING ARM	1		
25	12	20546	1 WASHER, SWITCH ACTUATING	1		
26	11	35814	1 NUT, SWITCH ACTUATING ARM	1		
27		30866A	2 SWITCH ASSEMBLY, CUT-OUT-IF	1	BOLT AND NUT DISCONNECT	
28		39670A	1 SWITCH ASSEMBLY, CUT-OUT-IF	2	QUICK-DISCONNECT	
28	10	30902	2 SCREW, CUT-OUT SWITCH TO IF	2		
29	22	23612	1 FITTING, GREASE-INNER TRANE	1		
30		29359	1 LUBRICAP, INNER TRANSOM PL	1		
31		34060	1 PLUNGER, OUTER TRANSOM PL	1		
32		34051A	2 SWITCH ASSEMBLY, LOCK-IN LI	1		
33	10	34055	2 SCREW, LOCK-IN LIMIT SWITCH	2		
34	54	24836	1 CLIP, LOCK-IN LIMIT SWITCH LE	1		
35	10	32031	1 SCREW, LOCK-IN LIMIT SWITCH	1		
36		22789	1 "D" WASHER, LOCK-IN LIMIT SW	1		
37		39672A	2 EXTENSION HARNESS ASSEMBL	1		
38	19	35684	1 WELCH PLUG, INNER TRANSOM	1		
39		34214	1 ARM, SHIFT CABLE MOUNTING-S	1		
40	22	21759	1 SPACER, SHIFT CABLE MOUNTIN	1		