



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		34193	PLATE, TRANSOM-INNER	1		
2		32239	CLAMP NUT, STEERING LEVER	1		
3		33639	CATCH, CLAMP NUT	1		
4	10	32759	SCREW, CATCH TO CLAMP NUT	3		
5	13	21547	LOCKWASHER, CATCH TO CLAMP NUT	3		
6		36287	COVER, CLAMP NUT-INNER TRAN	1		
7	10	25503	SCREW, CLAMP NUT COVER TO PLATE	1		
8	10	31984	SCREW, CLAMP NUT COVER TO PLATE	5		
9	12	20103	WASHER, CLAMP NUT COVER TO PLATE	6		
10	10	31983	SCREW, STEERING LEVER HOUSING	1		
11	54	24836	CLIP, TILT STOP SWITCH LEADS	1		
12	10	25764	SCREW, TILT STOP SWITCH LEADS	1		
13		22789	"D" WASHER, TILT STOP SWITCH LEADS	1		
14		30212	TERMINAL BLOCK, INNER TRAN	1		
15	10	30663	SCREW, TILT STOP SWITCH LEADS	2		
16	10	32024	SCREW, TERMINAL BLOCK TO PLATE	2		
17		32788	DISC, THRUST-WORM GEAR (LOWER)	1		
18		22834	BALL, WORM GEAR (LOWER)	1		
19	23	31757	BUSHING, NYLON-WORM GEAR (LOWER)	1		
20	43	31605	GEAR, WORM-INNER TRANSOM	1		
21	17	31728	PIN, WORM GEAR-SLEEVE AND LOCK	2		
22	23	31857	BUSHING, NYLON-WORM GEAR (UPPER)	1		
23	12	31727	WASHER, THRUST-WORM GEAR	1		
24		31631	COVER, RETAINING-WORM GEAR	1		
25	24	31729	SPRING, COMPRESSION-WORM GEAR	1		
26	23	31726	SLEEVE, WORM GEAR LOCKING	1		
27		31730	LOCK, SPLINED-WORM GEAR LOCKING	1		
28	10	21324	SCREW, WORM GEAR COVER AL	2		
29	23	26992	LOCKWASHER, WORM GEAR COVER	2		
30		33923A10	CRANK ASSEMBLY (10")	OPT.		
30		33923A16	CRANK ASSEMBLY (16")	OPT.		
30		33923A22	CRANK ASSEMBLY (22")	1		
30		33923A28	CRANK ASSEMBLY (28")	OPT.		
30		33923A34	CRANK ASSEMBLY (34")	OPT.		
31	37	32187	LABEL, DIRECTIONAL AND INS	1		
32		31842	KNOB, CRANK	1		
33	10	21356	SCREW, KNOB TO CRANK	1		