



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32420A	STEERING LEVER HOUSING ASSEMBLY	1		
2	31	30457	BEARING, ROLLER-STEERING	2		
3	26	31851	OIL SEAL, STEERING LEVER H	2		
4	22	23612	FITTING, GREASE-STEERING L	1		
5		29359	LUBRICAP, STEERING LEVER I	1		
6	32	31879	TUBE, NYLON-SHIFT ACTUATI	1		
7	27	32423	GASKET, STEERING LEVER HOL	1		
8	16	32422	STUD, STEERING LEVER HOUS	1		
9	16	32421	STUD, STEERING LEVER HOUS	1		
10	12	20959	WASHER, STEERING LEVER HO	2		
11	11	28040	NUT, STEERING LEVER HOUSI	2		
12	22	25885	ELBOW, STEERING LEVER HOU	1		
13		35249	LATCH, STEERING LEVER HOUS	1		
14	10	31972	SCREW, LATCH TO STEERING L	1		
15	38	31042	SERIAL PLATE USE FROM SERIA	2	SERIAL 01602186-01941218	
16	10	22290	SCREW, DRIVE-SERIAL PLATE A	2	SERIAL 01602186-01941218	
16	37	39395	DECAL, SERIAL NUMBER (STAR	1	SERIAL 01941219-02278488	
17	24	34381	SPRING, TORSION-LATCH	1		
18	10	29762	SCREW, TORSION SPRING TO S	1		
19	12	28001	WASHER, TORSION SPRING SCF	1		
20	54	24836	CLIP, TILT STOP SWITCH LEAD	1		
21	10	32031	SCREW, TILT STOP SWITCH LEZ	1		
22		22789	"D" WASHER, TILT STOP SWITC	1		
23		34903	ARM, STEERING-LOWER	1		
24	10	34954	BOLT, LINK ROD TO LOWER STE	1		
25	23	31853	BUSHING, LINK ROD BOLT	1		
26	11	31847	NUT, LINK ROD BOLT	1		
27	10	31830	SCREW, LOWER STEERING ARM	1		
28	14	31828	TAB WASHER, LOWER STEERIN	1		
29		34009	LINK ROD, LOWER STEERING AI	1		
30	10	31846	BOLT, LINK ROD TO GIMBAL RIN	1		
31	23	31853	BUSHING, LINK ROD BOLT	1		
32	11	31847	NUT, LINK ROD BOLT	1		
33		31844	SHAFT, STEERING-STEERING LE	1		
34	12	31829	WASHER, NYLON-UPPER AND L	2		
35		33775	ARM, STEERING-UPPER	1		
36	12	35685	WASHER, UPPER STEERING A	1		
37		35096	YOKE, UPPER STEERING ARM	1		
38	10	35095	SCREW, STEERING CABLE TO U	1		
39	12	20084	WASHER, STEERING CABLE SCF	1		
40	11	20102	NUT, STEERING CABLE SCREW	1		