



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		62814A	BELL HOUSING ASSEMBLY	1	
2	26	48443	OIL SEAL, BELL HOUSING	1	
3	16	54011	STUD, BELL HOUSING TO DRIV	6	
4	12	54012	WASHER, BELL HOUSING STUD	6	
5	11	35000	NUT, BELL HOUSING STUD	6	
6	27	54014	GASKET, BELL HOUSING TO DRI	1	
7	24	48442	SPRING, TENSION - OIL RELEAS	1	
8	25	48452	QUAD RING, OIL RELEASE CHEC	1	
9	20	48219	CHECK VALVE, OIL RELEASE	1	
10		54170A	COVER ASSEMBLY, CHECK VALV	1	
11	22	34982	CONNECTOR, CHECK VALVE G	1	
12	27	54021	GASKET, CHECK VALVE GUIDE C	1	
13	10	36137	SCREW, CHECK VALVE GUIDE C	3	
14	13	26992	LOCKWASHER, CHECK VALVE G	3	
15		57292	JUMPER CABLE, GIMBAL HOUSIN	1	
16	10	47225	SCREW, JUMPER CABLE	1	
17	32	34423A	HOSE, OIL - BELL HOUSING TO E	1	
18	54	54428	CLAMP, HOSE TO BELL HOUSING	2	
19		60932A	BELLOWS ASSEMBLY, UNIVERS.	1	
20	54	31765	CLAMP, BELLOWS TO GIMBAL H	2	
21		54406	BELLOWS, EXHAUST	1	
22	54	38889	CLAMP, EXHAUST BELLOWS AT	2	
23		62720A	GIMBAL HOUSING ASSEMBLY	1	
24		63720	EMBLEM, GIMBAL HOUSING	1	SEE PHOTO FOR CORRECT REI
24	37	76733	DECAL, GIMBAL HOUSING	1	SEE PHOTO FOR CORRECT REI
25	26	31783	OIL SEAL, LOWER GIMBAL HOI	1	
26	31	54043	BEARING, ROLLER - GIMBAL H	1	
27	26	54925	OIL SEAL, UPPER GIMBAL HOL	1	
28	31	21145	BEARING, ROLLER - GIMBAL HC	1	
29	22	23612	FITTING, GREASE - GIMBAL HC	1	
30		29359	LUBRICAP, GIMBAL HOUSING C	1	
31	16	57988	STUD, GIMBAL HOUSING TO TF	8	
32	27	54395	GASKET, GIMBAL HOUSING TC	1	
33	25	54521	"O" RING, GIMBAL HOUSING	1	
34		54068	PILOT RING, GIMBAL HOUSING	1	
35	16	56766	STUD, GIMBAL HOUSING TO H	2	
36		34762A	PLATE ASSEMBLY, INHIBITOR	1	
37	10	34763	SCREW, INHIBITOR PLATE T	2	
38	32	54392	TUBE, OIL - GIMBAL HOUSING	1	
39	23	54421	BUSHING, SEALING - OIL TUBE	1	
40		54422	COVER, SEALING BUSHING RE	1	