



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		74436A 9	HYDRAULIC PUMP ASSEMBLY(S			
2	25	21720	"O" RING, HYDRAULIC PUMP TO	4		
3	10	46318	SCREW, VENT - HYDRAULIC PI	1		
4	13	46317	LOCKWASHER, SEALING - VEN	1		
5	10	28634	SCREW, FILLER - HYDRAULIC I	1		
6	12	20260	WASHER, SEALING - HYDRUAL	1		
7		48077A 4	CONTROL VALVE ASSEMBLY	1	SERIAL 00000000-03786859	
7		66074A 3	CONTROL VALVE ASSEMBLY(SE	1	SERIAL 03786860-04644609	
7	25	21720	"O" RING, HYDRAULIC PUMP T	4		
8	22	52666	ELBOW, CONTROL VALVE	1		
9	10	21091	SCREW, CONTROL VALVE TO H	4		
10	13	26992	LOCKWASHER, CONTROL VALVE	4		
10		55642A 7	CONTROL PANEL ASSEMBLY, CC	1		
12		5642A 1	PANEL ASSEMBLY, CONTROL	1		
13	16	55422	STUD, CONTROL PANEL TO BC	4		
14	12	24676	WASHER, CONTROL PANEL ST	4		
15	11	27164	NUT, CONTROL PANEL STUD	4		
16		55738A 1	SWITCH, PUSH BUTTON - CON	3		
17		48078	JUMPER WIRE, PUSH BUTTON	1		
17		53107	JUMPER WIRE, PUSH BUTTON	1		
18		55641	RETAINER, PUSH BUTTON SW	1		
19	10	62568	SCREW, SWITCH RETAINER T	4		
20		45341 20	HARNES, CONTROL PANEL	1		
21		33865	BINDER, NYLON - CONTROL P	1		
22	54	46770	CLAMP, HARNES ATTACHING	1		
23	10	29227	SCREW, HARNES ATTACHING	1		
24	11	34388	NUT, HARNESA ATTACHING I	1		
25		58397A 3	BRACKET ASSEMBLY, MOUNTIN	1		
26		58491	BUMPER, RUBBER - PUMP MO	2		
27	10	59784	SCREW, PUMP MOUNTING AT	6		
28	12	29245	WASHER, PUMP MOUNTING B	6		
29	10	24234	SCREW, HYDRAULIC PUMP TC	4		
30	13	39107	LOCKWASHER, HYDRAULIC PL	4		
31	23	36534	/SPACER, MOUNTING BRACKET	4		
32	11	21908	NUT, HYDRAULIC PUMP SCRE	4		
33		45325	CONNECTOR AND HARNES	1	SERIAL 00000000-04644609	
33	84	74023	CONNECTOR AND HARNES	1	SERIAL 04644610-09999999	
34		45559	TERMINAL BLOCK, HYDRAULIC F	1	SERIAL 00000000-04644609	
35	10	35519	SCREW, TERMINAL BLOCK TO H	2	SERIAL 00000000-04644609	
36	10	62568	SCREW, HARNES LEADS TO TE	2	SERIAL 00000000-04644609	
37		55690	JUMPER WIRE, SOLENOID TO TU	1	SERIAL 00000000-04644609	