

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47350A	GIMBAL RING ASSEMBLY	1		
2	23	47378	BUSHING, GIMBAL RING (SWIV	1		
3	23	48311	BUSHING, GIMBAL RING (HING	2		
4	12	48313	WASHER, ANTI-GALLING - BELL	2		
5	17	48312	PIN, HINGE - GIMBAL RING TO G	2		
6	10	47450	SCREW, UPPER SWIVEL SHAFT	1		
7	12	47538	WASHER, UPPER SWIVEL SHAF	1		
8		47645	SHAFT, UPPER SWIVEL - GIMBAL	1		
9	22	47540	PLUG, PIPE - UPPER SWIVEL SH	1		
2	12	34858	WASHER, UPPER SWIVEL SHAF	2		
11		47367	LEVER, STEERING - UPPER SWI	1		
12	11	30499	NUT, STEERING LEVER TO UPPI	1		
13	10	54193	SCREW, STEERING LEVER TO U	1		
14	11	23161	NUT, STEERING LEVER SCREW	1		
15	10	24644	SCREW, STEERING CABLE TO S	1		
16	23	47643	SPACER, STEERING CALBE SCR	1		
17	11	20361	NUT, STEERING CABLE SCREW	1		
18		47438A	TILT STOP SWITCH ASSEMBLY,	1		
19	10	20367	SCREW, TILT STOP SWITCH CO	2		
20	23	31902	SPACER, TILT STOP SWITCH	1		
21		31899	PLATE, RETAINER - TILT STOP	1		
22	10	20055	SCREW, RETAINER PLATE TO G	2		
23		49343	LEVER, ACTUATING - TILT STOP	1		
24	10	31903	SCREW, ACTUATING LEVER TO	2		

