



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		46386	PLATE, TRANSOM (POWER TRIM)	1		
1		55498	PLATE, TRANSOM (POWER TRIM)	1		
2	22	47902	VENT, OIL RESERVIOR COVER	1		
3	54	26550	CLIP, WIRING HARNESS TO TRA	3		
4	10	30663	SCREW, WIRING HARNESS CLIF	3		
3		22789	"D" WASHER, WIRING HARNESS	3		
6	10	47467	SCREW, TRANSOM PLATE TO TI	2		
7	12	47475	WASHER, TRANSOM PLATE SCF	2		
8	12	47466	WASHER, FIBER - TRANSOM PL	4		
9	13	34846	LOCKWASHER, TRANSOM PLAT	2		
10	12	33171	WASHER, TRANSOM PLATE SCF	2		
11	11	22339	NUT, TRANSOM PLATE SCREW	2		
12		47337A	COVER ASSEMBLY, OIL RESERV	1		
13		48992	INDICATOR, OIL LEVEL	1		
14	22	32018	PLUG, OIL FILLER - OIL RESER	1		
15	25	35126	"O" RING, OIL FILLER PLUG	1		
16	27	47534	GASKET, OIL RESERVIOR COVER	1		
17	10	32565	SCREW, OIL RESERVIOR COVER	11		
18	22	47841	CONNECTOR, TRANSOM PLATE	1		
19	12	34876	WASHER, BELL HOUSING TO TF	8		
2	11	35000	NUT, BELL HOUSING TO TRANS	8		
21	32	47439	TUBE, CABLE GUIDE	1		
22	11	37984	NUT, JAM - CABLE GUIDE TUBE	1		
23		35221	RING, SWIVEL - CBLE GUIDE TUI	1		
24	12	47533	WASHER, SWIVEL RING PIVOT E	2		
25	17	47621	PIN, SWIVEL RING TO TRANSOM	1	EARLY MODELS	
26	10	31832	BOLT, PIVOT - SWIVEL RING TO	1	LATE MODELS USE QUANTITY	
27	13	31848	LOCKWASHER, SWIVEL RING PI	1	LATE MODELS USE QUANTITY	
27	37	39395	DECAL, SERIAL NUMBER	1		