



6477

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
NS	1589	865440H56	HOUSING ASSEMBLY, Driveshaft	1	(Use With Magnum and Hi-Perform	
NS	1589	865440H73	HOUSING ASSEMBLY, Driveshaft	1	(Use With Integrated Transom)	
-	1589	865440H70	HOUSING ASSEMBLY, Drivesha	1		
1		865441A02	COVER ASSEMBLY, Back	1	(Use With Magnum and Hi-Perform	
2		12708	SEAL	1		17
3		14497A 2	DETENT ASSEMBLY	1		
4	10	98794	SCREW, (.375-16 x 1.00)	2		
5	10	87158	SCREW, (.375-16 x 1.875)	1		
6		805261A 1	WEAR PAD KIT	1		
7		12711	SHAFT	1		
8		806552A 1	YOKE AND CAM ASSEMBLY	1		
9		806552	YOKE	1		
10	10	805733	SCREW, (.250-28 x 1.00)	2		
11	23	12706	SPACER	2		
12	11	826713 9	NUT, (.250-28)	2		
13	10	865712	SCREW, (.250-28 x .930)	2		
14		861175A 2	SHIFT LINKAGE ASSEMBLY, Hi	1		
15		NSS	NOT SOLD SEPARATE, SHIF	1		
16	12	20583	WASHER	1		
17	18	26953	COTTER PIN	1		
18		86776	LATCH	1		
19		865425A03	UNIVERSAL JOINT ASSEMBLY	1		
19		865425T02	UNIVERSAL JOINT ASSEMBLY	1	(Use With Integrated Transom Ass	
20		866133A01	YOKE, Splined, Coupler End	1		
20		866135A01	YOKE, Splined, Coupler End	1	(Integrated Transom Assembly)	
21	25	29845	O-RING, (.924 x .103)	2		17
22	25	35027	O-RING, (1.046)	1		17
23		866137T	CENTER SOCKET	1		
24		866136A01	CROSS AND BEARING	1		
25		866134T	YOKE, Gear End	1		
26	11	841026A 2	RETAINER/SEAL KIT	1		
27	25	861844	O-RING	1		
28	26	43993	SEAL, OIL	1		
29	12	862134	WASHER	1		
30	31	86763A04	BEARING ASSEMBLY, Tapered Ri	1		
31	43	849320T	GEAR, (16 Teeth)	1		
32	12	861832	WASHER	1		
33	11	97522	NUT, (.625-18)	1		
34		821630Q 1	ANODE PLATE ASSEMBLY	1		
35	10	65210	SCREW, (.375-16 x 1.00)	2		
36	12	26479	LOCKWASHER, (.375)	2		