



5678

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		865380A15	TRIM PUMP ASSEMBLY, Complete	1		
2		865380A13	PUMP/MOTOR ASSEMBLY, 12"	1		
3		79147A09	HARNESS ASSEMBLY, With Pack	1		
3		79147A08	HARNESS ASSEMBLY, With Mold	1		
4	88	812619	FUSE, 20 Ampere - Yellow	1		
5		828054	COVER, Fuse	1		
6	89	96158T	SOLENOID	2		
7		88075	RETAINER	1		
8	10	41508	SCREW, (.250-20 x .500)	4		
9	11	26419	NUT, (#8-32)	4		
10	84	86322A24	CABLE ASSEMBLY, (4.00 Inches)	1		
11	84	79138A 9	CABLE ASSEMBLY, Black, Neg	1		
12		94275	LINK, Connector	1		
13	13	26992	LOCKWASHER, (.250)	4		
14	11	94330	NUT, (.250-20)	4		
15	88	79023A10	FUSE ASSEMBLY, 110 Ampere	1		
16	12	25908	WASHER, (.265 x .812 x .0625)	1		
17	84	79139A12	CABLE ASSEMBLY, Red, Positiv	1		
18	13	26992	LOCKWASHER, (.250)	1		
19	11	21825	NUT, (.250-28)	1		
20	85	861680	INSULATOR	1		
21	10	48409	SCREW, (#10-16 x .625)	1		
22	84	86322A15	CABLE ASSEMBLY, (5.50 Inches)	1		
23	11	68292	NUT, (.312-18)	1		
24	10	90285	SCREW, (.312-18 x .625)	1		
25		862548A 1	BRACKET KIT	1	(Floor or Transom Mounted)	
26		58491	CHANNEL, Rubber (4.00 Inche	2		
27	12	29245	WASHER, (.281 x .500 x .060)	4		
28	10	59784	SCREW, (.250-10 x 1.00)	4		
29	13	35048	LOCKWASHER, (.375)	2		
30	10	98260	SCREW, (.375-16 x .620)	2		
31	84	865770A02	HARNESS ASSEMBLY, Adaptor, h	AR		
32	84	865771A02	HARNESS ASSEMBLY, Adaptor - f	AR		