



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		26079A 2	PLATE KIT, Wire Harness Mount	1		
2	10	15001	SCREW, (#8-16 x .875)	4		
3		865480T	BRACKET, Harness Mounting/Lift	1		
4	10	98261	SCREW, (.375-16 x .750)	2		
5		866236T01	PCM MODULE ASSEMBLY	1	(5.0L MPI)(Standard Cooling)	
5		866237T01	PCM MODULE ASSEMBLY	1	(5.0L MPI)(Closed Cooling)	
5		866238T01	PCM MODULE ASSEMBLY	1	(350 MAG.)(Standard Cooling)	
5		866239T01	PCM MODULE ASSEMBLY	1	(350 MAG.)(Closed Cooling)	
5		866242T01	PCM MODULE ASSEMBLY	1	(6.2L)(Standard Cooling)	
5		866243T01	PCM MODULE ASSEMBLY	1	(6.2L)(Closed Cooling)	
6	10	821300 25	SCREW, (M6 x 25)	3		
7	12	65567	WASHER, (.265 x .750 x .048)	3		
8	25	834985	GROMMET	3		
9	23	856954	BUSHING	3		
10		865479T01	BRACKET, ECM Mount	1		
11	10	860008	SCREW, Torx (.250-20 x .625)	3		
12	84	865980T02	HARNESS, Main Engine	1	(Digital Throttle and Shift)	
13	54	804351	CLIP, Relay Mounting	2		
14	54	804352	CLIP, Fuse Block Mounting	1		
15		883562	COVER, Fuse	1		
16		865202T	RELAY	2		
17	88	832969 20	FUSE, Yellow - 20 Ampere	3		
18		865483T	BRACKET, Circuit Breaker and Rel.	1		
19	88	865827T	CIRCUIT BREAKER, 50 Ampere	1		
20	11	29488	NUT, (#10-32)	2		
21	10	830861	SCREW, (8-32 x .625)	2		
22	11	40136 6	NUT, (M6)	3		
23	16	863439	STUD	1		
24	84	865983T01	HARNESS, Injectors	1		
25	84	865677T01	HARNESS, Transom	1		
26	84	888416T03	HARNESS ASSEMBLY, Clean Pow	1		
27		862646	FUSE, (Tan - 5 Ampere)	1		
28		828054	COVER, Fuse	1		
29	84	95084A10	CABLE ASSEMBLY, (5.00 Inches)	1	(Bravo)	
30	88	79091	FUSE, 20 Ampere	1	(Bravo)	
31	84	95084A 9	CABLE ASSEMBLY, (91.00 Inches)	1	(Bravo)	
32		881879 3	SENSOR, Pressure	1	(Power Steering Cooler)	
32		881879A 6	SENSOR, (0 - 100 PSI), Pressure	1	(Oil)	
33		878187	SENSOR ASSEMBLY, Knock	2		
34	87	815425T	SENDER ASSEMBLY, Oil	1		
34		27292T	SENDER ASSEMBLY, Oil	1	(Dual Station)	